

STIRLING®

34L MICROWAVE OVEN

Multistage Cooking
10 Power Levels



Features:



10 Power Levels

Microwave cooking power adjustable from 10% to 100% in 10 power levels.




1000W Power

Microwave power output for cooking, defrosting and reheating food.



Multistage Cooking

Set consecutive cooking sequences for multistage cooking.

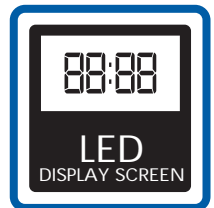

LED Display Screen

Electronic control panel with easy to read LED display screen.

Quick Start Guide

Read the full instruction manual thoroughly before use. It contains comprehensive usage instructions and important safety advice. This Quick Start Guide only contains a description of the most important control panel buttons.

Control Panel



Model Number	P10034AP-M4H
Colour	White
Microwave Power Output	1000W
Capacity	34L
Warranty	3 Years
Version	QSG-V1.1

For more information please visit www.stirlingappliances.com.au or call 1300 886 649

DISPLAY - Cooking time, power, action indicators and clock time are displayed.

QUICK COOK SETTINGS - Instant settings for cooking popular foods.

NUMBER PADS (0-9) - Press to enter the clock time, food weight or power level.

CLOCK - Press to set or recall the time of day. The time of day will be displayed at all times except when the oven is operating. In the event of a power failure, or if the oven is unplugged, the clock will have to be reset.

RESET - Press to clear all previous settings.

POWER LEVEL - Press this button once and then use the number pads to set a cooking power level other than full power.

TIMER - Press this button once and then use the number pads to set the required time. The timer will beep once the time is up. It works independently from any cooking operation.

COOK - Use this button when setting a two-stage cooking program.

DEFROST BY WEIGHT - Press this button and then use the number pads to enter the weight of the food to be defrosted.

COOK BY WEIGHT - Press this button and then use the number pads to enter the relevant code and weight for programmed cooking.

SPEED DEFROST - Press this button and then use the number pads to set a time-based speed defrost program with alternating defrosting and standing times.

START / STOP - Press this button to start or stop a program.

