

# STIRLING®

## 30L MICROWAVE OVEN WITH GRILL & CONVECTION

Microwave, Grill & Convection Cooking  
10 Power Levels



### Features:




**10 Power Levels**  
10 Power levels each for  
microwave cooking  
(from 10% to 100%)  
and convection cooking  
(from 110°C to 200°C)



**Microwave, Grill &  
Convection Power**  
Separate microwave, grill and  
convection settings,  
plus combination modes,  
for all your cooking needs



**8 Auto-Cook  
Options**  
8 Automatic cooking  
options for different food

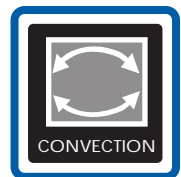

**Convection Function**  
10 Convection settings  
for baking or roasting  
at 110°C to 200°C

# Control Panel:



## DISPLAY WINDOW

Indicates clock, cooking time, etc.

## PRESET COOKING SETTINGS

Spaghetti, Reheat, Cake, Pizza, Potato, Popcorn, Beverage, Skewered Meat.

## NUMBER PADS

Use to set the time of day, cooking time, temperature, etc.

## MICRO+GRILL

Press to select one of two combination cooking settings.

## MICRO+CONVECTION

Press to select one of four combination cooking settings.

## CONVECTION

Press to program convection cooking.

## GRILL

Press to set a grill cooking program.

## POWER

Press to select microwave power level.

## DEFROST

Press and enter a time to defrost food.

## TIMER/CLOCK

Use to set the clock and the minute timer.

## WEIGHT DEFROST

Press to defrost food by weight.

## START/QUICK START

Press to start a cooking program, or to start the oven quickly at full power.

## CANCEL

Press to stop a cooking program, or to clear all previous settings before cooking starts.

Model Number	D90N30ASLR-T4H
Microwave Output Power	900W
Microwave Input Power	1400W
Convection Power	2200W
Grill Power	1250W
Capacity	30L
Warranty	3 Years
Version	QSG-V3.0

For more information please visit [www.stirlingappliances.com.au](http://www.stirlingappliances.com.au) or call 1300 886 649

