



46 Bottle Wine Cellar

Model Number SWC46

INSTRUCTION MANUAL

IM Version No.: V1.2

Issue Date: 07/2018

Welcome

Congratulations on choosing to buy a STIRLING® product.

All products brought to you by STIRLING® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year In Home Warranty. We hope you will enjoy using your purchase for many years to come.

Contents

- 2 Welcome**
- 4 Warranty**
- 5 General Safety Instructions**
- 7 Product Overview**
- 9 Getting Started**
- 9 Installation**
- 10 Instructions**
- 12 Specifications**
- 13 FAQs and Troubleshooting**
- 14 Other Useful Information**
- 18 Repair and Refurbished Goods or Parts Notice**
- 19 Warranty Returns**



STIRLING[®]

46 Bottle Wine Cellar

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



General Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings.

Keep the manual in a safe place for future reference, along with the completed warranty card and purchase receipt. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

WARNING: This is a wine cellar, this is NOT to be used to preserve or store fresh food or consumables.

A wine cellar is designed for the storage of bottles at a set temperature that is particularly suitable for wine. The temperature maintained in this wine cellar is too high for safe storage of perishable foods.

Electrical Safety

- **Voltage:** Before connecting and turning on the wine cellar, ensure the electrical voltage and circuit frequency correspond to that indicated on the appliance rating label.
- **Earthing:** This wine cellar should be properly earthed for your safety. The power cord of this wine cellar is equipped with a three-prong plug for use in standard wall outlets to minimise the possibility of electrical shock. Do not modify the cord and/or plug provided with the appliance. Improper use of the earthed plug can result in the risk of electric shock.
- **Connection:** This wine cellar requires a standard 220-240 V AC 50Hz electrical outlet. Do not overload the electrical circuit.
- **Power cord:** Do not kink or damage the power cord; do not leave it exposed or dangling. Secure it at the back of the appliance so no one steps on or places anything on the cord or against it. Keep the cord out of reach of children. When moving the appliance, make sure not to damage the power cord.
- **Auxiliary Items:** Do not use an inverter, adaptor or extension cord with this wine cellar. If the cord is too short, have a qualified electrician install an outlet near the appliance. Use of an extension cord and an inverter can negatively affect the performance of the unit.
- **Protect from moisture:** To protect against the risk of electric shock, do not immerse the unit, cord or plug in water or spray it with any other liquid. Do not connect or disconnect the electric plug when your hands are wet. Turn the power switch off before removing the plug from the socket.
- **WARNING: Disconnect!** To reduce the risk of fire, electric shock or personal injury, always unplug the appliance from the socket when not in use, when moving and before cleaning or servicing. Never unplug the unit by pulling the power cord. Always grip the plug firmly and pull straight out from the power point.
- **Electrical work:** Any electrical work required for the installation of this appliance should be carried out by a qualified electrician.

Usage Conditions and Restrictions

- **Domestic use only:** This wine cellar is intended for indoor household use only. It is not intended for commercial, industrial or outdoor use. It is not intended for use in a recreational vehicle.
- **Purpose:** Do not use this wine cellar for anything other than its intended purpose. Other uses are not recommended and may cause fire, electric shock or personal injury.
- **Attachments:** The use of attachments is not recommended by the appliance manufacturer and distributor as they may be hazardous.
- **Improper use:** Damage due to improper use, or repairs made by unqualified personnel will void your warranty. We assume no liability for any eventual damages caused by misuse of the product or noncompliance with these instructions.

General Safety Instructions Cont.

- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **Usage restriction:** This wine cellar is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the appliance. Never allow children to operate, play with or crawl inside the wine cellar.
- **WARNING:** Do not use electrical appliances inside the wine cellar, unless they are of the type recommended by the manufacturer.
- **Explosive or flammable substances:** Do not store explosive substances such as aerosol cans with a flammable propellant in this wine cellar. Do not store or use petrol or any other flammable vapours and liquids in the vicinity of this or any other appliance. Do not use such substances for cleaning the wine cellar. The fumes can create a fire hazard or an explosion.
- **Damage:** Do not use the wine cellar if the power cord, plug or the wine cellar itself is damaged. If the cord is damaged, contact the after sales support line and have the cord replaced by qualified personnel in order to avoid a hazard.
- **WARNING:** Do not damage the refrigerant circuit.
- **Do not modify:** Do not attempt to alter or modify this wine cellar in any way.
- **Repair:** Do not attempt to repair or replace any part of your wine cellar unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician. Contact the after sales support line for advice.
- **WARNING:** Keep ventilation openings, in the wine cellar enclosure or in-built structure, clear of obstruction.



This symbol alerts you to take care as this wine cellar contains a flammable refrigerant (isobutane) and insulation blowing gas (cyclopentane). Do not expose it to high heat, sparks and open flames.

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the wine cellar, ensure that none of the components of the refrigerant circuit become damaged.

Never use a wine cellar with a damaged refrigerant circuit! If the coolant circuit becomes damaged, avoid proximity to open fires and all types of heat sources. The room in which the wine cellar is located should be ventilated for a few minutes.

It is hazardous for anyone other than an authorised service person to service this wine cellar. In Queensland, the authorised service person **MUST** hold a Gas Work Authorisation for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.

The room for installing the appliance must be at least 1m³ per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found in the technical specifications on page 17 and on the appliance rating plate.

Product Overview


Wine Cellar Layout



- Key:
1. Electronic Control Panel (inside top of cabinet)
 2. Hinge Cover
 3. Glass Door
 4. Recessed Handle (on both sides)
 5. Chrome Shelves (5) + Chrome Basket (1)
 6. Security Lock (centred beneath glass door)
 7. Levelling Legs (4)
 8. Keys for lock (not shown)

Product Overview Cont.

Control Panel Layout

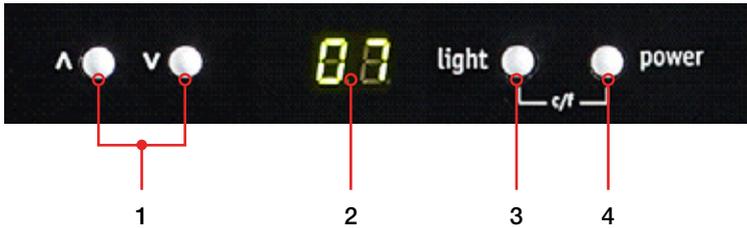

Key:

- 1. Temperature “+” & “-” Controls**
Press the Up or Down buttons to increase or decrease the temperature inside the wine cellar cabinet in 1°C intervals.
- 2. LED Display**
Displays the current temperature inside the wine cellar cabinet.
- 3. Light Control Button**
Press the light control button to turn the interior light ON and OFF.
- 4. Power Control Button**
Press the power button to turn the wine cellar ON and OFF.

Note.

- **Temperature Units**
Press and hold the Light and Power button together for 5 seconds to change the temperature display units from Celsius to Fahrenheit

Getting Started

Unpacking

- **Packaging materials:** This wine cellar has been packaged to protect it against transportation damage. Remove all packaging materials from around and inside the wine cellar and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the wine cellar when it is not in use. In the event the carton is to be disposed of, please recycle all packaging materials where possible.
- **Suffocation:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Power cord:** Unwind the power cord to its full length and inspect it for damage. Do not use the wine cellar if it or its cord have been damaged or are not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- **Read the manual:** Read this manual to familiarise yourself with the wine cellar. Pay particular attention to the safety instructions on the previous pages.
- **Clean:** To remove any dust from transit and storage, clean the interior and exterior surfaces of the wine cellar with lukewarm water and a soft cloth. Dry thoroughly.

Installation

- **Two person installation:** Use two or more people to move and install the wine cellar. Failure to do so can result in back or other injury.
- **Freestanding design:** This wine cellar is designed to be freestanding only, and should not be recessed or built-in.
- **Floor surface:** This wine cellar must be properly positioned on a dry, sturdy, level surface that is strong enough to support it when it is fully loaded.

Do NOT install/use the wine cellar in the following locations/situations:

- In a garage or any other outside installation.
- In moist areas or areas of high humidity.
- In a recreational vehicle, or for use with an inverter.
- In direct sunlight, near heat sources, next to an open flame, cooking or heating appliance, or near any other source of high heat.
- Direct sunlight may affect the acrylic coating and heat sources may increase the unit's power consumption. For best energy efficiency install the wine cellar in the coolest area of the room.
- In an area with extreme cold ambient temperatures.
- In an area with excessive moisture and high humidity. Make sure it is protected from elements such as wind, rain, water spray or drips.
- In an area where petrol or other explosive and/or flammable liquids or fumes are used or stored. The fumes can create a fire hazard or explosion.
- **Levelling:** It is important for the wine cellar to be level in order to work properly. To level the unit, adjust the levelling legs at the bottom of the wine cellar.
- **Ventilation:** To allow for proper air ventilation, leave a minimum 5cm of space between the back, sides and top of the wine cellar and make sure that the front of the unit is completely unobstructed. Ensure that the ventilation openings are never blocked or covered. Never cover shelves with aluminium foil or any other material, which may prevent air circulation.
- **Door swing:** The door on this appliance can be opened from either the left or the right side. Should you wish to change the door swing direction, follow the instructions on pages 16–17.

Installation Cont.

- **Suggested ambient temperatures:** Choose a well ventilated area for the wine cellar with temperatures above 16°C and below 32°C. Ambient temperatures above or below this range may affect the performance of the unit.
- **Settling:** Before connecting the wine cellar to the power source, let it stand upright for approximately 4 hours. This will allow any refrigerant gasses that may have been disturbed during the transportation process to settle and reduce the possibility of a malfunction in the cooling system from handling during transport.
- **Electrical connection:** Plug the wine cellar into a dedicated, properly installed wall outlet. Do not under any circumstances cut or remove the third (earth) prong from the power cord. Any questions concerning power and/or earthing should be directed toward a licensed electrician or our after sales support centre.
- After plugging the wine cellar in, turn the unit on and allow it to cool down for 3–4 hours before placing wine bottles or beverages in the appliance.

Instructions

First use

- **Powering on:** Press and hold the POWER button for three seconds to turn the appliance on.
- **First cooling down:** When you first switch on the wine cellar, the compressor will run continuously until the wine cellar reaches the set temperature. During this period of time, try not to open the door frequently or place bottles inside the appliance. After about 3–4 hours, you can start loading the wine cellar.
- **Odour:** You may notice an odour when you first switch on the wine cellar. This is due to the parts being new and is no cause for concern. The odour will subside as the wine cellar starts to cool.

IMPORTANT

- When you use the wine cellar for the first time or restart it after it has been turned off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED display. This is normal and it is due to the length of activation time. Once the wine cellar has been running for a few hours, everything will return back to normal.
- When loading several bottles of wine at once, it will take longer for the appliance to cool the individual bottles than when adding a bottle at a time.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the wine cellar or reconnecting it to your mains supply.

Temperature Control

This wine cellar enables you to store your wine in a stable temperature environment and free from light exposure and vibrations. These are most important factors when it comes to storing wine. A stable, temperature-appropriate environment will help maintain the quality of your wine and prevent spoilage.

- Selecting the right temperature: You can store your wine at the most appropriate serving temperature (see the table below). Set the temperature according to the type of wine that is mostly stored in the wine cellar.

Wine Type	Recommended Storage Temperature
Bordeaux Red	18°C
Burgundy / Bordeaux Red	16°C
Port	15°C
Young Burgundy Red	14°C
Young Red Wines / Rosé	12°C
Aged White Wines / Chardonnay	10°C
Sherry	7–9°C
Young White Wines	5–7°C


Instructions Cont.

Setting and adjusting the temperature:

You can set and adjust the temperature in the cabinet to anywhere within the cooling range (5°C – 18°C).

1. To adjust the temperature, press the UP or DOWN button repeatedly.
2. With every press, the temperature will increase (or decrease) by one degree.
3. The current temperature inside the cabinet is shown on the LED display.
4. To view the set temperature at any time, press the UP or DOWN button and the set temperature will temporarily flash in the LED display for a few seconds.

Example:

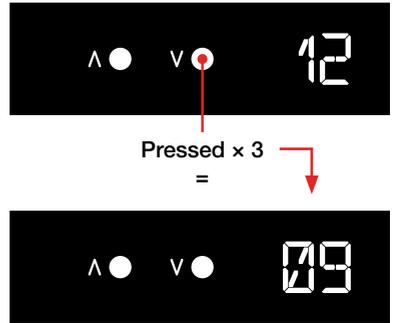


Temperature display:

The temperature inside the cabinet can be displayed in either degrees Celsius (°C) or degrees Fahrenheit (°F). The default setting is in °C.

To change the display to °F

1. Press and hold the LIGHT and POWER button together for approximately 5 seconds.
2. The temperature value will change and the °F indicator will be illuminated on the control panel.

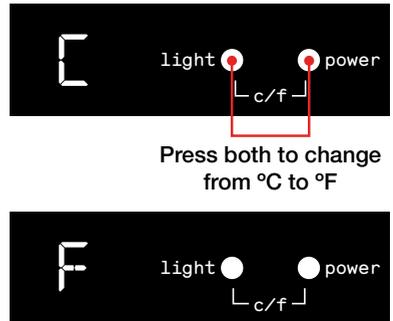

Loading the wine cellar

Standard bottle capacity: Your wine cellar holds a maximum of 46 standard (traditional 750mL bottles). Do not overload the cabinet, and only store wine in sealed bottles.

Larger bottles: Storing wine in larger or different shaped bottles may affect its storage capacity. If storing larger bottles, make sure that they do not prevent the door from shutting properly. Before shutting the door, always check that you can close it without bottles falling down inside the cabinet.

Shelving configuration: The shelves in the wine cellar may be removed to suit various wine bottle shapes and sizes. The loading diagram (Fig. 1) shows how to fit the maximum amount of standard size and shape bottles. (See page 14 for instructions on how to remove a shelf)

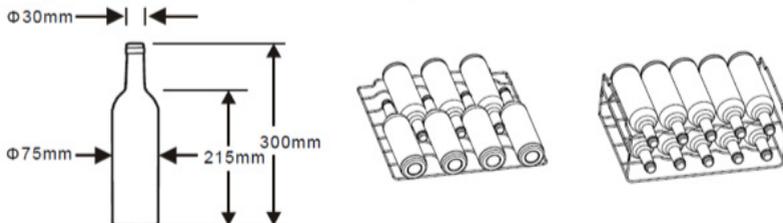


Fig. 1

Instructions Cont.

Access: To prevent damaging the door gasket, make sure the door is fully open when pulling shelves out of the rail compartment. For easy access to the bottles stored, pull the shelves out approximately one third. The shelves are designed with an emergency stop to prevent them being removed too far when loaded.

For efficient operation: Do not open the door unnecessarily. Only keep it open for as long as necessary when removing or adding a bottle.

Interior Light

- Your wine cellar has an LED interior light for your viewing convenience. To activate the light, press the LIGHT button on the control panel and check the contents, then press the button again to switch off the light.
- For best wine storage conditions, always leave the light off during normal operation.
- Note: If the light is not working or needs to be replaced, please call our After Sales Support on 1300 11 4357 for further guidance.

Door Lock

- Your wine cellar is equipped with a lock and key for safe storage of wine.
- The keys are located inside the plastic bag that contains the instruction manual.
- Insert the key into the lock and turn it counter clockwise to unlock the door.
- Turn the lock clockwise to lock the door, making sure the metal pin is engaged completely.
- Remove the key and place it in a secure place for safekeeping.

Fridge Door Detector Alarm

- If the cellar door is accidentally left open for more than one and a half minutes, an audible alarm will sound. To stop the beeping, press any button on the controls or simply close the cellar door.

Specifications

Product Dimensions (W, D, H): 545mm, 565mm, 855mm

Weight: 37kg

Temperature Range: 5–18°C

Other Features: White internal LED light

Electronic controls

Double layer UV glass

FAQs & Troubleshooting

Problem	Possible Cause	Possible Solution
The wine cellar does not operate.	<ul style="list-style-type: none"> The appliance is not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse. 	<ul style="list-style-type: none"> Plug in the wine cellar. Turn on power point. Reset circuit breaker/replace fuse.
The wine cellar is not cold enough.	<ul style="list-style-type: none"> Check the temperature control setting. The door is opened too often, or is kept open for too long or is not closed completely. The wine cellar has recently been disconnected for a period of time. 	<ul style="list-style-type: none"> Reduce the temperature. Do not open door for 4 hours. Check that the door is closed properly and for any obstructions preventing the door closing properly. Plug in the wine cellar.
The wine cellar turns on and off frequently.	<ul style="list-style-type: none"> The room temperature is hotter than normal. A large amount of contents has been added to the wine cellar. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. 	<ul style="list-style-type: none"> Increase air flow into room. Do not open door for 4 hours to allow wine cellar to cool to temperature. Check that the door is closed properly and for any obstructions preventing the door closing properly. Check temperature setting and decrease if required. Replace gasket.
Vibrations	<ul style="list-style-type: none"> Wine cellar is not level. Wine cellar is touching the wall If continued vibration occurs. 	<ul style="list-style-type: none"> Level wine cellar. Ensure a 5cm gap from sides and top Turn off the wine cellar, unplug the power plug and contact our after sales support centre for further assistance.
The door will not close properly.	<ul style="list-style-type: none"> The wine cellar is not level. The door was reversed and is not properly installed. The gasket is dirty. The shelves are out of position. 	<ul style="list-style-type: none"> Level wine cellar. Remove door and re-fit. Clean gasket with warm water and a soft cloth. Re-position shelves correctly.
Moisture forms on the inside cellar walls.	<ul style="list-style-type: none"> The door is slightly open. The door is kept open too long, or is opened too frequently. The door does not seal properly. 	<ul style="list-style-type: none"> Check that the door is closed properly and for any obstructions preventing the door closing properly. Do not open door for 4 hours to allow wine cellar to cool to temperature. Check if gasket is damage and replace if it is.
Moisture forms on the outside of the appliance.	<ul style="list-style-type: none"> The door is slightly open, causing cold air from inside the wine cellar to meet warm, moist air from outside. 	<ul style="list-style-type: none"> Check that the door is closed properly and for any obstructions preventing the door closing properly.

Other Useful Information

Cleaning and Maintenance

WARNING

Before cleaning the appliance, make sure it is switched off and disconnected from the power supply. Failure to do so can result in electric shock or injury.

- Take out any bottles as well as the shelves before cleaning.
- To remove a shelf, pull it out slightly so that the notch in the shelf is positioned exactly under the plastic protrusion at the side of the cabinet, then lift up the shelf and remove (Fig. 2).
- When reinserting the shelf, place it with the notch exactly above the plastic post and then lower the shelf onto the rails.
- Wash the inside surfaces with a solution of lukewarm water (1L) and baking soda (2 tbsp). Use a soft, clean cloth to wipe down the surfaces, then rinse with clean water and dry with a dry cloth. Do not use soap or detergent for cleaning the cabinet.

WARNING

Do not wash any parts in dishwasher.

NOTE: Wring excess water out of the cloth when cleaning around the controls or electrical parts.

- Make sure to keep the door gasket (seal) clean to keep the unit running efficiently.
- Wash the shelves and the outside of the cabinet with a mild detergent solution. Wipe dry with a clean soft cloth.
- Dust or anything else blocking the vent may hinder the cooling efficiency of the appliance. Always keep the vent clean; vacuum it if necessary.

WARNING

Never clean the unit with an abrasive, acid, oil or solvent based cleaning agent. Never use flammable fluids or sprays for cleaning as the fumes from these substances can create a fire hazard or Explosion.

When you are on holidays

- Leave the wine cellar operating during holidays of less than three weeks. If you are not going to use the wine cellar for longer periods, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odours and mould growth, leave the door open slightly, blocking it open if necessary.
- To move the wine cellar, take all items out of the appliance, securely tape down the shelves and tape the door shut. Turn the levelling leg up to the base to avoid damage.
- Protect the outside of the wine cellar with a blanket or similar soft material and make sure the wine cellar stays secure in the upright position during transportation.



Fig. 2

Other Useful Information Cont.

Defrosting

The evaporator behind the rear wall of the unit defrosts automatically. The condensate collects in the drainage channel behind the rear wall of the unit and flows through the drainage hole into the water drip tray by the compressor, where it evaporates.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your wine cellar if you minimise the number of times the door is opened. If the power is going to be off for a longer period of time, take proper steps to protect the contents.

Service and Repair

Do not attempt to alter or modify this wine cellar in any way.

Do not attempt to repair or replace any part of the wine cellar unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician. Contact the after sales support line for advice.

Spare Parts

Our after sales support centre stocks the following spare parts for the SWC46 – 46 Bottle Wine Cellar.

To purchase a part, call the centre on 1300 11 4357 or email us at support@residentiagroup.com.au

- | | |
|---------------------------------|-------------------------|
| 1. Control box | 8. Glass door |
| 2. Control panel sticker | 9. Light PCB |
| 3. Cooling fan | 10. Chrome basket |
| 4. Display PCB | 11. Chrome shelf, large |
| 5. Door gasket | 12. Power PCB |
| 6. Door hinge (upper and lower) | 13. Thermostat |
| 7. Foot, large | 14. Water tray |

Other Useful Information Cont.

Reversing the Door Swing

The wine cellar has the capability of the door opening from either the left side or the right side to suit your individual installation requirements. If you want to reverse the opening direction, follow the instructions below.

WARNING


- To avoid personal injury to yourself and/or damage to property, it is highly recommended that someone assist you during the door reversal process.
- Make sure the wine cellar is disconnected from the power supply and empty of bottles when changing the side at which the door opens.
- Keep all parts you remove from the wine cellar for installation on the other side.

1. Remove the hinge cap from the top of the door.
2. Unscrew the hinge and place screws in a safe place as they will be used later.
3. Remove the hinge and the plastic washer.
4. Remove the plastic screw hole plugs from the other side of the wine cellar.
5. Lift the door upwards off the bottom hinge and put it to one side.
6. Remove the hinge plug from the left hand side of the wine cellar door.
7. Put the hinge plug just removed onto the other side of the door.
8. Remove the bottom hinge.
9. Remove the screw hole plugs from the other side of the wine cellar.
10. Install the hinge in the new position.
11. Put the door on the hinge.
12. Place the washer over the screw holes and place the hinge on top.



Other Useful Information Cont.
– Reversing the Door Swing Cont.

13. Make sure that the hinge pin is inserted into the hole in the door.
14. Screw the hinge into place.
15. Place the hinge cap over the hinge.
16. The swing of the door is now on the other side.

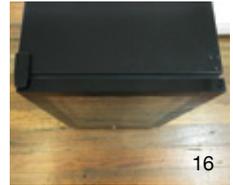

Specification and Technical Parameters

This product complies with AS/NZS 60335.1 and AS/NZS 60335.2.24 electrical safety, and with EN 55014-1:2006+A1:2009 A2:2011 for electromagnetic compatibility.

Responsible Disposal

- At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.
- This refrigeration appliance contains flammable refrigerants and insulation blowing gases, which must be removed before disposal. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant. Contact your local authorities for advice on recycling facilities in your area.
- **Danger:** risk of child entrapment! To avoid the possibility of child entrapment, take off the door and leave the shelves in place before discarding your wine cellar so that children cannot easily climb inside.

46 BOTTLE WINE CELLAR

Model	SWC46
Climate Class	T
Classification Of Protection	
Against Electric Shock	I
Rated Voltage	220-240V~
Rated Frequency	50Hz
Rated Current	0.7A
Lamp Rated Power	0.6W
Refrigerant	R600a
Amount	25g
Total Gross Volume	133L
Total Storage Volume	131L
Insulation Blowing Agent	Cyclopentane
Net Weight	37kg
Dimension(W*D*H)	545*565*855mm
Made in	China

ELECTRIC DIAGRAM

AUS 1300 11 4357

support@residentiagroup.com.au

Residentia Group PTY LTD 07/2018

V1.1 Barcode: 2633 9320 PLU: 60982 E2447

AFTER SALES SUPPORT

AUS 1300 11 43 57

support@residentiagroup.com.au

MODEL: SWC46 | PRODUCT CODE: 60982 | 07/2018



STIRLING[®]

46 Bottle Wine Cellar

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 11 43 57 or write to us at:

Residentia Group
118 Campbell Street
Collingwood VIC 3066
Australia

Email: support@residentiagroup.com.au

Helpline hours of operation:
Mon-Fri
9:00 AM - 5:00 PM



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 11 4357.

For an electronic copy of this manual, go to www.stirlingappliances.com.au and download a copy.



This page
is intentionally
left blank