

STIRLING®

Clothes Dryer 6KG

Multiple drying programs and reverse tumble drying action. With wall mounting kit.



Features:




Multiple Programs

Choose from Light Dry, Middle Dry, Extra Dry, and 1 Hour Dry programs




Safety Switch

Safety switch on door stops the dryer once the door is opened

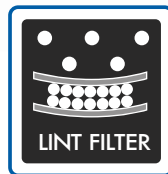

Lint Filter

Removable, easy to clean lint filter

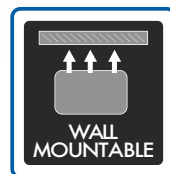

Wall Mountable

Includes kit for easy upside down wall-mounting and 2 control panel stickers

Read the full instruction manual thoroughly before use.

This Quick Start Guide only contains brief operating instructions.

Always read the washing instruction of garments being dried to ensure they are suitable for tumble drying.

Operating Instructions

1. Press the POWER button.
2. Choose the required program cycle by pressing the DRYNESS button.
3. Choose the required temperature by pressing the TEMPERATURE button.
4. Press the START/PAUSE button to start the selected program
5. A buzzer will sound 6 times to indicate that the dryer has finished the selected program.

Note:

- The dryer operates best when the dryer is 1/2 - 2/3 full of clothes. This allows the air to circulate evenly.
- The dryer will automatically turn off after 10 minutes if a program has not been selected.
- The dryer will automatically turn off after the 6th buzz has sounded at the end of the cycle.
- Ensure that the lint filter is cleaned before each use and that it is in the correct position before operating the dryer.
- If there is no heat from the dryer, please press the RESET button, located on the rear of the dryer.

Clothes with the following markings on the label must NOT be loaded into the dryer.



Do not tumble dry



Hang for dry



Drip dry



Flat dry



Dry automatically

