

STIRLING®

CHROME WALL FAN

Remote control operation
Oscillating or fixed function
Adjustable tilt head
Chrome metal finish



Features:



40CM WIDE

40 cm Wall Fan

Allows for maximum
air movement



4 BLADE

4 Aluminium Blades

Sturdy blades to
maximise wind
speed and durability



TILT

Adjustable Tilt Head

The fan can be tilted up
and down to angle the
airflow as desired



OSCILLATING

Oscillating or Fixed Function

Oscillating function to
cover a large area

Quick Start:

Read the full instruction manual before use. This Quick Start Guide only gives basic usage instructions.

Using the fan

1. After you have finished mounting the unit on the wall, plug the unit into the power.
2. Press the ON/SPEED button on the remote control or the ON/OFF/SPEED button on the switch panel to start the fan and select the speed. The indicator light next to the fan speed will illuminate to show what speed the fan is on. Continue to press the ON/OFF/SPEED button on the unit until the desired fan speed is reached.
3. Press the OFF button on the remote control or the ON/OFF/SPEED button on the switch panel again when the fan is in high speed, the fan will then turn off.
4. Push or pull the fan guard up and down to adjust the up-down tilt degree. There are 4 tilt positions to select from.

Wind Modes

The fan is equipped with 3 different wind modes – Normal, Natural and Sleep. Press the MODE button on the remote control switch panel, you can select 3 kinds of wind. The indicator light on the switch panel will display what mode the fan is in

Sleep mode: The airflow from the fan will decrease and the speed will lower.

Normal mode: The fan will continue at a constant speed.

Natural mode: The fan speed will fluctuate to replicate a varying breeze.

Using the Timer Function

Whilst the unit is on, press the TIMER button on the remote control or switch panel, the timer function will turn on by 30mins increments. Each additional press of the button will add 30mins onto the timer up until 7.5hrs is reached. The timer function will turn off if you press timer button again after the timer reaches 7.5hrs.

Swing/Oscillation

Press the SWING button on unit or remote control to allow the unit to swing/oscillate from side to side. Press again to cancel this function.

NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Model Number	FB-40MR
Warranty	1 Year

For more information
please email info@gstrading.com.au
or call 1300 554 124