

STIRLING®


40cm CHROME PEDESTAL FAN

WITH METAL BLADES


3 Speeds
80° Oscillation
Adjustable Tilt Head
Adjustable Height to 1.4m




Features:

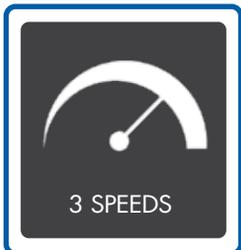


3 Speeds
Get the perfect airflow
wherever you are

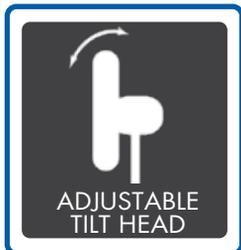

Adjustable Tilt Head
Direct the airflow to make
it suitable for your situation

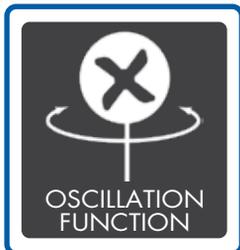

Oscillation Function
Swings 80 degrees
to distribute airflow
more evenly

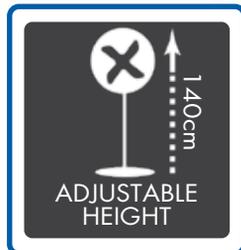

Adjustable Height
Move the fan head up
or down for comfort




Quick Start Guide:

Please read the 'General Safety Instructions' section of the Instruction Manual before operating the fan.




Assembly

Assembling the Base

- Place the Stand (13) on the Round Base (16), and insert the 4x Base Screws (15) through the corresponding holes (insert from the top). (Fig.1)
- Holding the Base Screws (15) and Round Base (16) in place, tilt up to base to secure from the underside.
- Slide the Base Weight (17) over the 4 Base Screws (15), then secure the Base Weight (17) in place with the 4x Butterfly Nuts (18). (Fig.2)
- Carefully place the Stand Assembly upright on the floor.
- Remove the Inner Tube (11) from the Stand by first gripping it and then removing the Height Adjustment Screw (12) fully. (Fig.3)

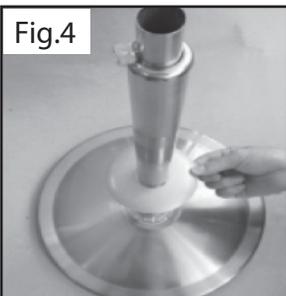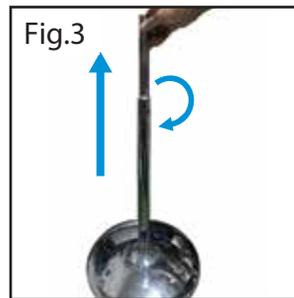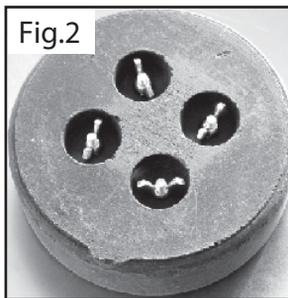




- Slide the decorative Stand Cover (14) over the Stand (13) and place it in the recess on the Round Base (16). (Fig.4)
- Partially insert the Inner Tube (11) into the Stand (13), and hold it in place while re-tightening the Height Adjustment Screw (12). (Fig.5)
- Remove the Motor-Stand Screw (10) from underneath the Motor Housing (9), then slide the Motor Housing assembly onto the top of the Inner Tube (11). (Fig.6)
- Replace the Motor-Stand Screw (10) and tighten it by hand so that the Motor section doesn't come off the Stand when lifted. (Fig.7)

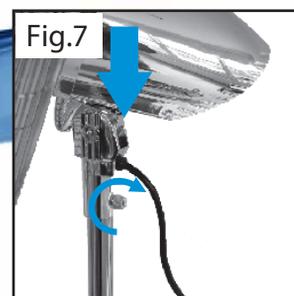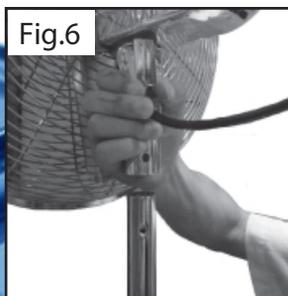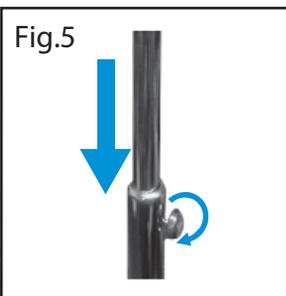




Assembly (cont.)

Assembling the Fan Head

- Unscrew the Guard Retaining Nut (4) from the Motor Housing (9) by rotating it anticlockwise. (Fig.8)
- Position the Rear Guard (5) on the front of the Motor Housing (9); ensure that the handle is at the top.(Fig.9)
- Replace the Guard Retaining Nut (4) and hand-tighten it firmly.(Fig.10)
- Undo the Blade Retaining Screw (3).
Place the Fan Blade (2) on the Motor Shaft (6) and push it back as far as it will go.
- Now replace the Blade Retaining Screw (3) tightly to lock the Fan Blade (2) to the Motor Shaft (6). (Fig.11)

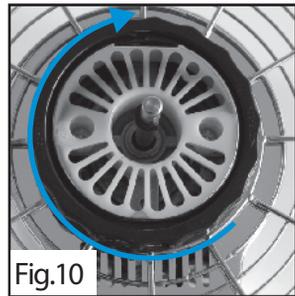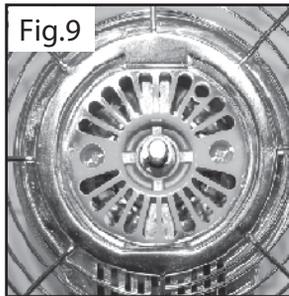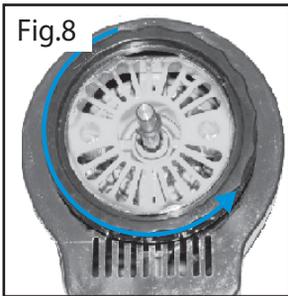




- Attached to one of the guards is the Guard Locking Screw & Nut (19). Remove these and keep them safe. (Fig.12)
- Open the Guard Locking Clips (20) of the Front Guard (1) fully. Hook the top of the Front Guard (1) over the Rear Guard (5) and pull down to attach it. (Fig.13)

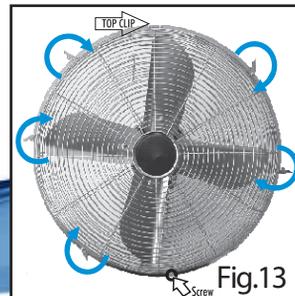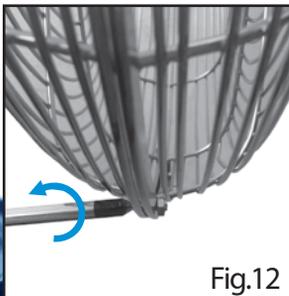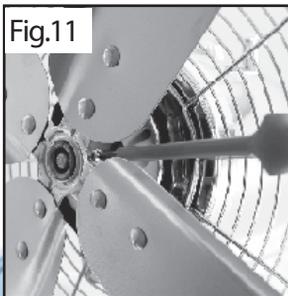

Assembly (cont.)

Assembling the Fan Head (cont.)

- Manoeuvre the Front Guard (1) so that the screw holes at the bottom of both guards line up. Loosely attach the Guard Locking Screw & Nut (19). (Fig.14)
- Line up the two guards and then shut the Guard Locking Clips (20) to secure the two guards. (Fig.15)
- Now tighten the Guard Locking Screw & Nut (19) tightly. This completes the fan assembly. (Fig.16)

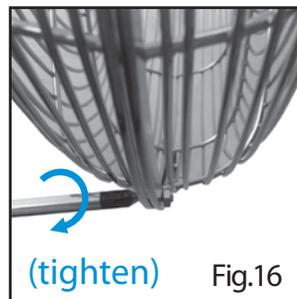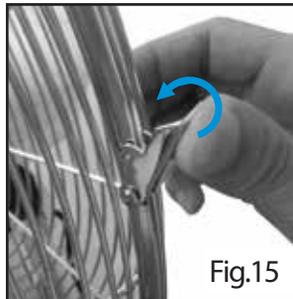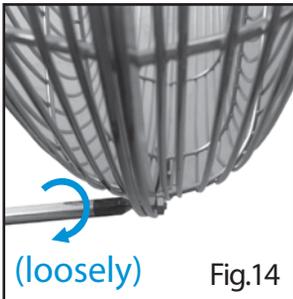

Model Specifications	SVS4A-40CR
Colour	Chrome
Warranty	1 year

For more information
please call 1300 366 155
or visit www.stirlingappliances.com.au