

# STIRLING®

## ROBOT VACUUM CLEANER

Sweep, vacuum and mop your floors with  
the touch of a button.  
Cleaning has never been so easy.  
Come home to clean floors everyday  
without any effort.



### Features:



#### AFTER SALES SUPPORT

☎ AUS 1800 898 750

📧 [service@wkfe.com.hk](mailto:service@wkfe.com.hk)

 
MODEL: EE-9248 PRODUCT CODE: 51614 12/2015

# Overview of the Appliance

Use the following diagrams and explanations to familiarise yourself with the components of the robot vacuum cleaner and its accessories:

## Top view

- 1 Infrared signal receiver
- 2 Display screen
- 3 Front bumper
- 4 Touch buttons
- 5 Dustbin release key
- 6 Air outlet release key
- 7 Air outlet
- 8 Dustbin
- 9 DC socket
- 10 Power switch

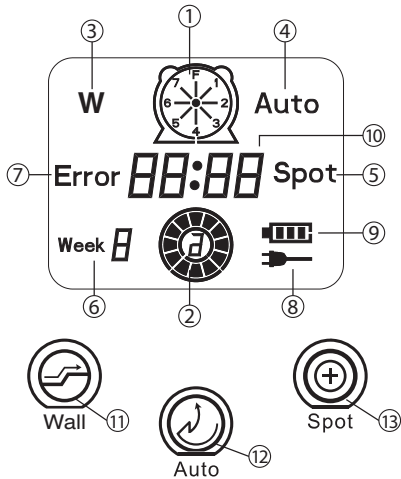

### Menu Display:

1. select the desired cleaning day / days of the week
2. Wheel rotation/speed display
3. W "W" Wall following Mode
4. Auto "Auto" cleaning display
5. Spot "Spot" cleaning display
6. "Current" week
7. Malfunction display
8. Charging display
9. Battery life display
10. Time display

### Touch Buttons:

You are able to activate the below cleaning modes without using the remote control.

11. Wall Following
12. Auto cleaning
13. Spot cleaning
14. EM Mode (refer page 16)

### AFTER SALES SUPPORT

1800 898 750

 
[service@wkfe.com.hk](mailto:service@wkfe.com.hk)

MODEL: EE-9248 PRODUCT CODE: 51614 12/2015

## Overview of the Appliance CONT.

### Bottom view

- 1 Right wheel
- 2 Rubber brush
- 3 Main brush
- 4 Rubber dust bar
- 5 Dust filter bracket
- 6 HEPA dust filter
- 7 Velcro mop base
- 8 Mop pad
- 9 Right side cleaning brush
- 10 Front wheel
- 11 Ground detection sensor
- 12 Battery cover
- 13 Left side cleaning brush
- 14 Left wheel

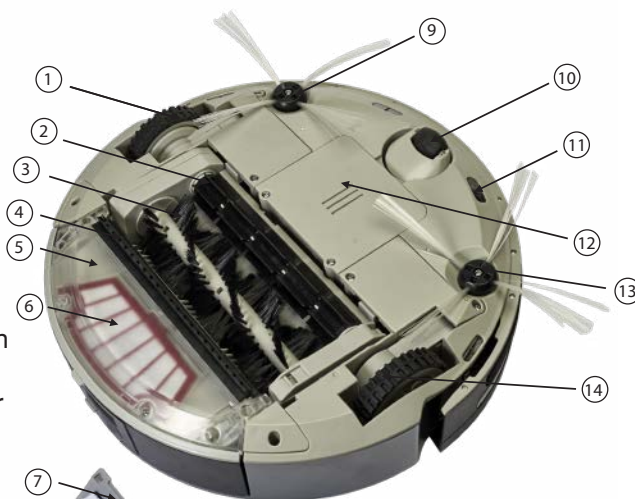

### Accessories

- 15 Power adaptor
- 16 Space isolator
- 17 Double sided tape for fix Docking Station
- 18 Docking station
- 19 Remote control
- 20 Cleaning brush
- 21 2 x D battery for space isolator
- 22 2 x AAA battery for remote control
- 23 1 x Ni-MH battery for vacuum cleaner



### Not shown:

- Instruction manual
- Warranty card
- Quick Start Guide

#### AFTER SALES SUPPORT

 1800 898 750

 [service@wkfe.com.hk](mailto:service@wkfe.com.hk)

MODEL: EE-9248 PRODUCT CODE: 51614 12/2015

## Getting Started

Refer to the full manual for detailed operating and cleaning instructions.

 
### Setting the Remote Control & Method of Use

The remote control comes with two AAA batteries. Ensure these are correctly loaded in the remote controller before getting started.

#### \*\*\*The following steps are very important, or the remote control may fail.

You should check the code of the remote control and vacuum so that they can function together.

1. Check that the remote control and cleaner have enough power. Turn off the cleaner, press ENTER on the remote control for more than 4 seconds, and then turn on the vacuum without releasing ENTER on the remote control. After the cleaner beeps twice, release ENTER, then the code check set is finished.
2. If you fail to hear a beep during the code check, just repeat the above process.

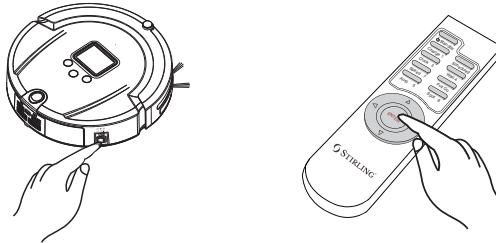

Your robot vacuum cleaner is equipped with many practical functions that allow it to clean wooden floors, short-pile carpet/rugs, tiles and vinyl flooring. Ensure carpets/rugs are in good condition before use.

The device uses artificial intelligence (AI) to adjust to its environment and reliably clean its working area. The device is equipped with three level sensors that recognise staircases and other dips to ensure that it will not fall.

The robot vacuum cleaner works in 4 cleaning programmes: random, spiral, along the wall and spiral again. This enables it to automatically tackle several cleaning scenarios. The battery will last between 90 to 120 minutes and will cover 250 to 280 square metres assuming it has been fully charged. During this time the vacuum cleaner will work through these programmes in an arbitrary sequence depending on the environment.

**For first time use, make sure the robot vacuum cleaner battery has been fully charged for 12 hours for best performance.**

**Normal charge time will take within 4-5 hours before the battery is full again.**

---

#### AFTER SALES SUPPORT

  1800 898 750





 [service@wkfe.com.hk](mailto:service@wkfe.com.hk)

MODEL: EE-9248 PRODUCT CODE: 51614 12/2015

## Spare Parts Ordering

### You may order below listed spare parts for your Robot Vacuum Cleaner EE-9248:

- Send an email to [order@wkfe.com.hk](mailto:order@wkfe.com.hk) and advise what spare parts are required and the quantity you would like to order.
- Please advise your full name, email, delivery address and contact number.
- We will advise the charges for your order including postage to your address.
- After you confirm the order a payment request via Paypal will be initiated. You will receive an email from Paypal with payment instructions. You don't need to register with Paypal, you just need a credit card and email address.
- After receipt of payment the spare parts will be mailed to you without any extra delivery or handling charges.
- Please keep this information for future reference, whenever you would like to order spare parts for Robot Vacuum Cleaner EE-9248.

	<b>Cleaning Brush</b>		<b>Dust Filter</b>		<b>Docking Station</b>
	<b>Main Brush</b> (incl. 1 rubber cover)		<b>Dust Filter Bracket</b>		<b>Space Isolator</b> (excluding battery)
	<b>Rubber Brush</b> (incl. 1 rubber cover)		<b>Velcro Mop Base</b>		<b>Remote Control</b> (excluding battery)
	<b>Brush Rubber Cover</b>		<b>Mop Pad</b> (2 pack)		<b>Battery</b>
	<b>Side Brush</b> (4 pack)		<b>Air Outlet</b>		<b>Power Adaptor</b>

#### AFTER SALES SUPPORT

  1800 898 750

 [service@wkfe.com.hk](mailto:service@wkfe.com.hk)

MODEL: EE-9248 PRODUCT CODE: 51614 12/2015