



## Carpet Cleaner

The Stirling Carpet Cleaner is simple to use. Fill up the clean water tank with water and add your cleaning solution to get started. The dirty water and particles from your carpet are then vacuumed into the waste tank for easy disposal when full.



### Features:



#### 600W Power

Low power consumption



#### 6m Power Cord

Long power cord with convenient storage



#### Clean Water Tank

Detaches for easy refill



#### 2.45L Waste Tank

Simply click and lift to remove and empty

# Getting Started:

Please refer to the instruction manual for full instructions on how to operate the Carpet Cleaner.

**NOTE:** Use only low foam carpet cleaning solution (not included). Excess foam will prevent the machine from working effectively. It is also recommended to purchase anti-foam solution to add to the waste tank to prevent excess foaming. These are available from all good hardware and DIY outlets as well as professional carpet cleaning stores.



## 1. Assemble the Carpet Cleaner

Place upper handle onto main body and screw the supplied 2 x screws in with Phillips head screwdriver.



## 2. Prepare the Area to be Cleaned

Dry Vacuum the carpet before use.



## 3. Fill Water Tank

Fill clean water tank with 1 capful of carpet solution (not included) and warm water.



## 4. Power On

Plug into power outlet and then switch ON/OFF switch on unit to the "I" position.



## 5. Start Cleaning

Step on release pedal to lower the handle and press the clean water tank trigger to release solution.



## 6. Cleaning Motion

Use a slow backward and forward motion when cleaning.



## 7. Empty Waste Tank

When waste tank is full, push the latch to release the waste tank for emptying.

Model	IA0850
Power	600W
Colour	Grey / Blue
Warranty	3 years
Dimensions	109 x 26 x 42cm
Net Weight	6 Kg



For more information  
please call 1300 777 137  
or visit [www.stirlingappliances.com.au](http://www.stirlingappliances.com.au)