


STIRLING®

2 IN 1 CORDLESS VACUUM CLEANER

Bagless filtration system
Upright or handheld operation



Features:

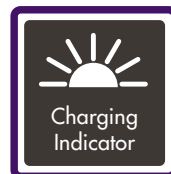

Overview of the Appliance

Use the following diagrams and explanations to familiarise yourself with the components of the 2-in-1 Cordless Vacuum Cleaner and its accessories:

Handheld Vacuum

- 1 Charging Socket
- 2 Handheld Vacuum Handle
- 3 Power Switch (I)/(II)
- 4 Charging Light/
Dust Container
Release Button
- 5 Dust Container
- 6 Dust Filter

Upright Vacuum

- 7 Rotating Brush Bar
'On' Light
 - 8 Floor Brush
 - 9 Handle
 - 10 Power Switch (I)/(II)
 - 11 Handle Release Button
 - 12 Handheld Vacuum
Release Button
 - 13 Charging Station
 - 14 Charging Socket
 - 15 Crevice Nozzle
 - 16 Brush Attachment
- 17 Mains Adaptor
18 Charging Plug
19 Charging Cable

Not Shown

- Manual
Warranty Card



AFTER SALES SUPPORT

 1800 898 750

 service@wkfe.com.hk

MODEL:KB-9008 PRODUCT CODE: 52178 03/2016

1

Before You Get Started

Please refer to the Instruction Manual for full instructions on how to operate the Vacuum Cleaner

- Remove your Vacuum Cleaner from its packaging.
- Straighten the Handle until it clicks into place.
- Press the Floor Brush firmly into position
- Ensure the Dust Container is correctly attached to the Vacuum Cleaner, and that the Dust Filter is inside it; otherwise the motor can get damaged.
- Position the Charging Station on a flat surface
- Connect the Charging Plug into the Charging Socket on the Charging Station.

Charging the battery

- The Charging Light will be Red to show that the Vacuum is connected and is charging. The Vacuum will be charged after being connected to the power for approximately 4-5 hours. The Charging Light will change to Green at this point.

Caution! Only use the supplied Mains Adaptor to charge your Vacuum Cleaner.



**Foldable Handle
for Easy Storage**



**Easy to Park and
Charging Station**

Using the Handheld Vacuum

- Remove the Handheld Vacuum from the main unit by pressing the Handheld Release Button, and detaching it.
- Press the Power Switch to alternate between settings (I) for dust, (II) for dirt or crumbs, and OFF



**Alternative
Power Switch**

AFTER SALES SUPPORT

  1800 898 750

 service@wkfe.com.hk

MODEL:KB-9008 PRODUCT CODE: 52178 03/2016

Before You Get Started (continued)

Using the Upright Vacuum

- Ensure the Handheld Vacuum is correctly positioned on the main unit and the Handheld Vacuum is turned off.
- Press the Upright Vacuum Power Switch to alternate between setting (I) for dust, (II) for dirt or crumbs, and off.
- Upright Vacuum is ideal for carpet, tiles and wooden floors.



**Rotating Floor Brush
with Swivel Head**



**Brush Picks Up Dust,
Dirt or Crumbs Easily**

Using the Crevice Nozzle and Brush Attachments

- Either of these attachments can be attached to the Vacuum Cleaner making it easier to clean hard to reach places or upholstery



**Brush Attachment
for Dusting**



**Crevice Nozzle
for Corners**



**Connecting
Attachments**



**Easy to empty
Dust Canister**

**For best performance, make sure the battery has been fully charged (12 hours) the first time the Vacuum is used.
After that, normal charge time is 4-5 hours.**

AFTER SALES SUPPORT

  1800 898 750

 service@wkfe.com.hk

MODEL:KB-9008 PRODUCT CODE: 52178 03/2016