

STIRLING®

STAINLESS STEEL DISHWASHER



Features:



15 Standard Place Settings
Fits 15 standard place settings: dinner and side plates, soup bowls, cups and saucers, glasses and cutlery.



6 Programs
Includes Intensive, Heavy, Normal, Rapid, Rinse and Soak program options.



1-24 Hour Delay Timer
Programmable for a delayed start from 1 to 24 hours.



Anti-Flood Device
Automatically cuts off water supply to the dishwasher in the event of a leak.

Quick Start Guide

For detailed operating instructions, read the content in the manual on the pages listed below.

Topic	Brief instructions	Page
Installation	Install the dishwasher on a level surface near an existing water inlet, drain connection and power point.	11-13
Loading the dishwasher	Scrape off leftover food, soften burnt food residues with water, then load plates, larger bowls and pots in the bottom basket, cutlery in the cutlery basket and glasses, cups and small plates or bowls in the top basket.	16-19
Selecting a program	Close the door and press the PROGRAM button to select the desired program.	14-15
Adding detergent	Fill dishwasher detergent (or a detergent tablet) into the detergent dispenser compartment.	20-21
Checking rinse aid	Unless you use a detergent tablet with rinse aid, make sure there is sufficient liquid rinse aid in the dispenser.	22-23
Switching on	Plug the dishwasher in, turn on the water tap to full pressure, then press the ON/OFF button to switch on.	9
Running the dishwasher	Press the START/PAUSE button to start the selected wash program.	9, 24
Changing a program	Once a program has started, you can only change it at the beginning before the detergent has been released. To change a program at this stage, cancel the current program first, then select the new program and start again.	25
Adding a dish	A dish/utensil can be added any time before the detergent dispenser opens. Open the door a little and, when the spray arms stop working, add the forgotten dish. Close the door to restart.	25
After the wash	When the buzzer indicates the program has finished, press the ON/OFF switch to turn off the dishwasher and open the door — take care as hot steam may escape. Wait at least a few minutes and let your dishes cool down before unloading. Turn off the power, close the tap and leave the dishwasher door slightly ajar to let moisture evaporate.	25

Model Number **STRSS15**

Colour **Stainless Steel**

Capacity **15 Place Settings**

Warranty **3 Years In Home**

Version **QSGV1.0**

