


STIRLING[®]

ELECTRIC PYROLYTIC OVEN

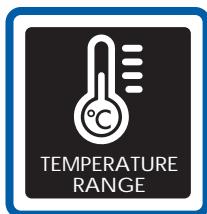

Quick Start Guide

IMPORTANT: The oven must be professionally installed by a licensed electrician. See the full instruction manual for installation and usage instructions before first use.

Manual (function) cooking









Press the FUNCTION (F) button. The function cooking symbol (F) will start flashing on the display.

Press and hold the FUNCTION UP/DOWN selector ▲/▼ button until the desired oven function appears. A suggested temperature is set and appears on the temperature display. If the suggested temperature is not changed within approximately five seconds, the oven begins to heat up.

To change the suggested oven temperature, press the PLUS/MINUS (+/-) button(s) while (F) is flashing, until the desired oven temperature is selected, then press the (OK) button.

Programmed mode [P]

You can choose from 8 auto (programmed) cooking programs, which have set cooking times and temperatures (see the table details)

	Function	Preset Temp. (°C)	Preset Timer	Temp. Setting Range (°C)	Timer Setting Range
	P--1 Keep warm	65	no	65	0-6h
	P--2 Rising	40	no	40	0-6h
	P--3 Toasting bread	200	10 mins	190-210	8-10 mins
	P--4 Pizza	190	18 mins	170-190	16-25 mins
	P--5 Chicken pcs	190	45 mins	180-200	40-50 mins
	P--6 Bread	190	25 mins	180-220	20-30 mins
	P--7 Cake	200	30 mins	190-210	25-35 mins
	P--8 Meat	180	30 mins	170-190	25-35mins

Consult the full instruction manual for comprehensive installation, usage and cleaning instructions and important safety advice.

Model Number STR-APYRO

Oven Capacity 70L

Warranty 3 Years In Home

Version QSGV1.0

For more information
please visit www.stirlingappliances.com.au
or call 1300 886 649

