

# STIRLING<sup>®</sup>

## INTEGRATED DISHWASHER

7 wash programs including a low energy and water consumption program and drying program.



### Features:



#### 14 Place Settings

Fits 14 standard place settings: dinner and side plates, soup bowls, cups and saucers, glasses and cutlery.



#### 7 Programs

Intensive, heavy, normal and rapid wash programs, rinse and soak programs plus a special 60 minute program for everyday use.



#### 1-24 Hour Delay Start

Programmable for a delayed start from 1 to 24 hours.



#### Easy Lift-Up System

The upper basket height can easily be adjusted to fit taller glasses or larger plates.

# Quick Start Guide

For detailed operating instructions, read the content in the manual on the pages listed below.

Topic	Brief instructions	Page
<b>Installation</b>	This appliance is designed for fully integrated installation in your kitchen. Make sure the surface is level and there is a water inlet, drain connection and power point nearby.	11-19
<b>Loading the dishwasher</b>	Scrape off leftover food, soften burnt food residues with water, then load plates, larger bowls and pots in the bottom basket, cutlery in the cutlery tray and glasses, cups and small plates or bowls in the top basket.	22-25
<b>Checking rinse aid</b>	If you are using a standard detergent, make sure there is sufficient liquid rinse aid in the dispenser.	28-29
<b>Adding detergent</b>	Fill dishwasher detergent (or a detergent tablet) into the detergent dispenser compartment.	26-27
<b>Running the dishwasher</b>	<ul style="list-style-type: none"> <li>• With the dishwasher plugged in and the water tap turned to full pressure, press the <b>ON/OFF</b> button to switch on.</li> <li>• If you are using a “3 in 1” or similar detergent tablet, press the <b>3in1</b> button and select the Intensive, Heavy or Normal program.</li> <li>• Press the <b>PROGRAM</b> button to select a wash program (or press the <b>60min</b> button for this program).</li> <li>• If you want the dishwasher to start later, press the <b>DELAY</b> button to delay the start for up to 24 hours.</li> <li>• Close the dishwasher door firmly to start the selected wash program, or the countdown to a delayed start.</li> </ul>	30, 9 20-21, 26 20-21 30
<b>Changing a program</b>	Once a program has started, you can only change it at the beginning <b>before</b> the detergent has been released. To change a program at this stage, cancel the current program first, then select the new program and start again.	30
<b>Adding a dish</b>	A dish/utensil can only be added <b>before</b> the detergent dispenser opens. Open the door a little and when the spray arms stop working, add the dish. Close the door to restart.	30
<b>After the wash</b>	When the buzzer indicates the program has finished, open the door — take care as hot steam may escape. Press the <b>ON/OFF</b> button to turn off the dishwasher. Wait at least 15 minutes to let your dishes cool down before unloading. Turn off the power, close the tap and leave the dishwasher door slightly ajar to let moisture evaporate.	31

Model Number	W60B2A41 1B
Capacity	14 Place Settings
Warranty	3 Years In Home
Version	QSGV2.1

