

STIRLING®

LCD Steam Iron

2400W Power

Anti-drip and Anti-limescale



Features:



Double ceramic coated soleplate
Glides smoothly over all types of fabric



 
340ml Water tank capacity
Large capacity tank and filling cup for easy filling



Electronic LCD display
With electronic steam and temperature control



Soft grip handle for comfortable use
Soft grip handle for comfortable use

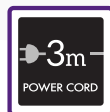

3m Power Cord
With 360° swivel to avoid tangles



Steam Jet and Water Spray
Stubborn wrinkles are easily removed with a burst of steam or spray of water



Self-Cleaning Function
For thorough removal of impurities from the steam chamber and vents

KNOW ABOUT YOUR STEAM IRON

Attention!

Read and follow the instructions in the instruction manual before you start ironing.

- The iron gets very hot during use. **DO NOT** touch the soleplate, only touch the handle of the iron.
- Never iron your clothes or other textiles while wearing them.
- The steam that is emitted is very hot. **DO NOT** touch it.
- Never point the soleplate of the iron or the steam jet at people or animals.
- Never place the iron on a table, worktop or similar with the soleplate of the iron facing down. Always place the iron on its heel or on the designated section of the ironing board.
- The iron may be filled with water. Remove the power plug from the socket before filling the water tank.
- If water spills over the iron when filling it, the device must be completely dry before connecting it.
Never immerse the device, the power cable and plug in water or any other liquid, because there is danger of electric shock.

How to use the iron

Before using the steam, steam jet or spray function of the iron, the tank must be filled with water. You can either use normal tap water or distilled water.

- If the tap water is particularly hard, it's best to use distilled water. Your water supply company can provide information about water hardness.
- Once you have used distilled water, you should continue to use it in the future rather than tap water.
Distilled water is free of salts, organic substances and microorganisms, allowing the tank to stay clean and free from limescale even after prolonged use.

NOTE: Before ironing, make sure that there is enough water in the tank and add more if necessary. This is safer and saves time.

1. Remove the plug from the socket and allow the iron to cool down if you have used it earlier.
2. Open the water inlet cover.
3. Tilt the iron slightly and carefully allow the water to flow into the water inlet of the tank, optionally use the filling cup to add the water to the tank.
4. Fill the water tank with water as far as the marking.
5. Once you have done that, make sure that the MAX marking on the tank has not been exceeded. To do this, place the iron on its heel. If necessary, pour away the excess water.
Maximum tank fill volume: approx. 340 mL.
6. Close the cover.

The logo for Stirling, featuring a stylized 'S' symbol followed by the word 'STIRLING' in a bold, sans-serif font.

AFTER SALES SUPPORT

  1800 269 981

Toll free

 support@eurocentra.com.au


MODEL: EC-LIS-01 PRODUCT CODE: 53817 07/2016

KNOW ABOUT YOUR STEAM IRON

Temperature settings

Pay attention to the information and symbols on the textiles you want to iron.

The desired temperature setting is selected by repeatedly pressing the **TEMP ▲ / ▼** buttons. The display indicates the following:

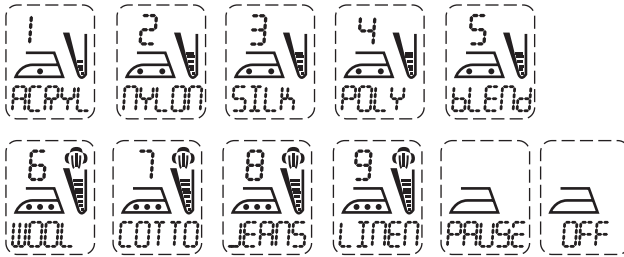

LCD-Display	Type of fabric	Temperature setting
ACRYL	Acrylic	1
NYLON	Nylon	2
SILK	Silk	3
POLY	Polyester	4
BLEND	Mixed fabric	5
WOOL	Wool	6
COTTO	Cotton	7
JEANS	Jeans	8
LINEN	Linen	9

Other:

PAUSE	Automatic switch-off has responded
OFF	Standby-Mode

 **STIRLING**

AFTER SALES SUPPORT

  1800 269 981

Toll free

 support@eurocentra.com.au

MODEL: EC-LIS-01 PRODUCT CODE: 53817 07/2016

KNOW ABOUT YOUR STEAM IRON

The LCD screen displays ERR1. There is a technical issue with the temperature sensor.

The LCD screen displays ERR2. The temperature of the soleplate is unusual low. It is not heating up properly. Switch the power off at the wall socket and unplug the iron.


The LCD screen displays ERR3. The temperature of the soleplate is unusual high. Switch the power off at the wall socket and unplug the iron.

Ironing


Switching on and heating up

1. Place the iron on its heel or on the designated section of your ironing board.
2. Put the mains plug in a socket with earthing contact. The standby mode display illuminates in red.
3. Set the desired temperature setting by pressing the TEMP ▲/▼ buttons, the setting mode display now illuminates in blue. All setting changes are confirmed by an acoustic signal. Pay attention to the display. While the fabric type display and the symbol with the temperature bars blink, the iron is heating up. Once the display no longer blinks the desired temperature has been reached and you can start ironing.

Dry ironing

1. Push the steam control switch to end stop position .
2. Proceed as described under "Switching on and heating up".
3. Start ironing as soon as the display no longer flashes.

Steam ironing

1. Push the steam control switch to the desired position .
2. Set the desired temperature setting by pressing the TEMP ▲/▼ buttons. Select at least setting 6 (as steam ironing is not possible using settings 1-5).
3. Start ironing as soon as the display no longer flashes. Steam is emitted as soon as you are holding the iron horizontally.

 **STIRLING**

AFTER SALES SUPPORT

  1800 269 981

Toll free

 support@eurocentra.com.au

MODEL: EC-LIS-01 PRODUCT CODE: 53817 07/2016