

# STIRLING®

## STAINLESS STEEL DISHWASHER

14 Standard place settings  
6 Wash programs



### Features:



#### 6 Programs

Includes wash programs for heavily, normally or lightly soiled loads and special rinse and soak programs.



#### 1-19 Hour Delay Timer

Programmable for a delayed start from 1 to 19 hours.



#### Eco Wash

Save energy and water with this specially designed eco program for everyday use.



#### Anti-Flood Device

Detects the presence of water in the base of the dishwasher and stops it from filling further.

# Quick Start Guide

For detailed operating instructions, read the content in the manual on the pages listed below.

Topic	Brief instructions	Page
<b>Installation</b>	Install the dishwasher on a level surface near an existing water inlet, drain connection and power point.	11-13
<b>Loading the dishwasher</b>	Scrape off leftover food, soften burnt food residues with water, then load plates, larger bowls and pots in the bottom basket, cutlery in the cutlery basket and glasses, cups and small plates or bowls in the top basket.	16-19
<b>Selecting a program</b>	Close the door and press the <b>PROGRAM</b> button (repeatedly) to select the desired program.	14-15
<b>Adding detergent</b>	Fill dishwasher detergent (or a detergent tablet) into the detergent dispenser compartment.	20-21
<b>Checking rinse aid</b>	Unless you use a detergent tablet with rinse aid, make sure there is sufficient liquid rinse aid in the dispenser.	22-23
<b>Switching on</b>	Plug the dishwasher in, turn on the water tap to full pressure, then press the <b>ON/OFF</b> button to switch on.	9
<b>Running the dishwasher</b>	Press the <b>START/PAUSE</b> button to start the selected wash program.	9, 24
<b>Changing a program</b>	Once a program has started, you can only change it at the beginning <b>before</b> the detergent has been released. To change a program at this stage, cancel the current program first, then select the new program and start again.	25
<b>Adding a dish</b>	A dish/utensil can be added any time <b>before</b> the detergent dispenser opens. Open the door a little and, when the spray arms stop working, add the forgotten dish. Close the door to restart.	25
<b>After the wash</b>	When the buzzer indicates the program has finished, press the <b>ON/OFF</b> switch to turn off the dishwasher and open the door — take care as hot steam may escape. Wait at least a few minutes and let your dishes cool down before unloading. Turn off the power, close the tap and leave the dishwasher door slightly ajar to let moisture evaporate.	25

Model Number	W60A1A401B-SS
Colour	Stainless Steel
Capacity	14 Place Settings
Warranty	3 Years In Home
Version	QSG-V3.0



For more information  
please visit [www.stirlingappliances.com.au](http://www.stirlingappliances.com.au)  
or call 1300 886 649