

STIRLING[®]

75cm Stainless Steel Gas Cooktop




Features:



5 Italian-made gas burners: 1 wok burner, 1 rapid, 2 semi-rapid & 1 auxiliary burner



Each burner is fitted with a safety flame failure device: stopping gas if a flame goes out

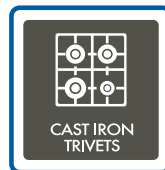

Strong cast iron trivets that can be removed for easy cleaning



Simply lift the control knobs, trivets & burners to easily clean a single piece of stainless steel

Quick Start Guide

Installing the cooktop (refer to user manual)

All gas/electrical work must be done in accordance with local and national codes as applicable and should be undertaken by licenced and qualified persons only.

Operating Your Cooktop

Choosing the desired burner

For your convenience there is a choice of hotplates:

- 1 × small (auxiliary) burner for special low heat and slow cooking.
- 2 × medium (semi-rapid) burners for normal cooking and simmering.
- 1 × large (rapid) burner for fast heating and large pots and pans.
- 1 × wok burner for use with woks.

To conserve gas place the pan centrally over the burner and adjust the flame so that it does not extend past the edge of the pan (see figure 1).

Lighting and extinguishing the burners (see figure 2)

Each burner is controlled by a control knob on the front of the cooktop. The illustration on the bottom left side of the control knob indicates which cooking zone it controls (A). Each control knob has three marked positions. Off (B), highest setting (C) and lowest setting (D).

To light a burner, depress the corresponding knob for the selected zone (A) and turn in an anti-clockwise direction to the highest setting (C). Pressing down on the control knob will release sparks to all burners. Once the flame is lit, hold the knob down for approximately 15 seconds to ensure it stays lit once released. After this 15-second interval, choose the desired setting by continuing to turn the control knob anti-clockwise until the flame is at a suitable level. The operating position **MUST** be a position between the highest and lowest setting. To switch a burner off, turn the control knob clockwise back to the Off position (B)

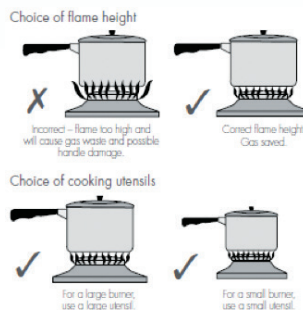


Fig. 1

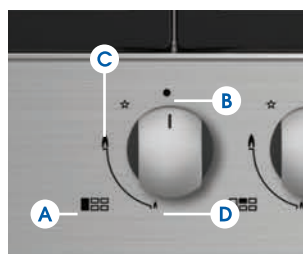


Fig. 2

Always refer to the full instruction manual for detailed installation, operating instructions, cleaning and maintenance and troubleshooting issues.

Model Number	SGCW75S
Finish	Stainless Steel
Warranty	3 years

For more information please call 1300 11 43 57 or visit www.stirlingappliances.com.au

Version 1.0

