



# 20L Microwave Oven

5 Power Levels

8 Auto Cooking Settings



## Features:



**Defrost Setting**  
For easy defrosting



**700W Output Power**  
700W microwave  
cooking power  
(1200W input power)



**Digital Display Screen**  
Electronic, easy  
to read digital  
display screen

# Quick Start Guide

Read the full instruction manual thoroughly before use. It contains comprehensive usage instructions and important safety advice. This Quick Start Guide only contains a description of the most important control panel buttons.

## Control Panel:



**Digital Display:** Cooking time, power level, weight or servings indicators, and the current time are displayed here.

**Auto Cook Settings:** The numbers 1–8 are the codes for cooking popular foods: beverages, rice, spaghetti, potatoes, fish, pizza, popcorn, and auto reheat.

**Power:** Press to set the microwave cooking power level.

**Multi Stage Cooking:** Press to set a multistage cooking program.

**Pre-Set:** Press to set a pre-set (delayed start) timer.

**Wei. Adj.:** Press to set the desired weight/servings for the quick cook settings.

**Wei. Def.:** Press to set the weight of food to be defrosted.

**Kitchen Timer:** Press to set the kitchen timer (up to 95 mins).

**Clock:** Press to set the clock time.

**Time/Menu:** Turn the dial to select an auto cooking function, input a cooking time, select a food weight/serving, or set the clock time.

**Start/Quick Start:** Press to start a set program. Press multiple times to set the desired cooking time, without previously setting a power level and a cooking time.

**Stop/Cancel:** Press to cancel a setting or reset the microwave before setting a cooking program. Press once to temporarily stop cooking, or twice to cancel cooking altogether.

Model Number P70H20EL-DG-BLU

Microwave Cooking Power 700W

Capacity 20L

Warranty 3 Years

Version QSGV1.0

For more information please visit [www.stirlingappliances.com.au](http://www.stirlingappliances.com.au) or call 1300 886 649