

# STIRLING<sup>®</sup>

*Designer Collection*

## 2 Slice Toaster



# Quick Start Guide

Read the full instruction manual thoroughly before use. It contains comprehensive instructions and important safety advice. This Quick Start Guide only contains basic instructions.



### Step 1

Unpack the contents of the box.



### Step 2

Plug the power cord into a powerpoint. Turn on at the switch.



### Step 3

Place your choice of bread into the slots.



### Step 4

Select the browning setting using the dial to the desired level. "1" being light and "7" being dark.



### Step 5

Push down the lever to start the toast cycle. Once complete the toast will automatically pop up.



### Step 6

To clean the toaster, regularly clean the removable crumb tray. Wipe down the exterior of the toaster.

Model Specifications	AP170133
Colour	Blue, Black, White
Voltage	220-240VAC 50-60Hz
Power	1000W
Capacity	2 Slice
Weight	1610g
Warranty	3 years

For more information please visit [stirlingappliances.com.au](http://stirlingappliances.com.au) or call 1300 663 907

