



90cm Glass Canopy Rangehood

Model Number SRHGC90

INSTRUCTION MANUAL

IM Version No.: V1.2

Issue Date: 04/2018

AFTER SALES SUPPORT

  1300 11 4375

 support@residentiagroup.com.au

MODEL: SRHGC90 | PRODUCT CODE: 60140 | 04/2018



E2447

Welcome

Congratulations on choosing to buy a STIRLING® product.

All products brought to you by STIRLING® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year In Home Warranty. We hope you will enjoy using your purchase for many years to come.

Contents

02 Welcome Section

04 Warranty Page

06 Safety Instructions

07 Specifications & Components

08 Controls

09 Installation Requirements

11 Cleaning & Maintenance

12 Troubleshooting & Technical Data

13 Repair and Refurbished Goods or Parts Notice



STIRLING®

90CM GLASS CANOPY RANGEHOOD

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Safety

This rangehood must only be installed in accordance with the instructions provided. Incorrect installation may cause harm to persons, damage property and void the product's warranty.

This rangehood complies the safety standard AS/NZS60335.2.31 and AS/NZS 60335.1

Important

Please ensure that you read the entire instructions before beginning the installation of your rangehood.

Warning

All electrical work must be done in accordance with local and national electrical codes as applicable and should be undertaken by licenced and qualified persons only.

- This rangehood is designed for domestic household use only.
- This appliance is not intended to be used by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the rangehood by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- You must read the instructions concerning the method and frequency of cleaning.

Important!

There is a risk of fire if cleaning isn't carried out in accordance with the instructions.

- Never flambé under the rangehood.
- Exhaust air must not be discharged into an existing flue which is used by other appliances for exhausting fumes.
- If the power supply cord of this rangehood is damaged in any way, it must only be replaced by one of our authorised service agents. Please call the Support Team on 1300 11 4375 for further assistance.
- Your new rangehood is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in the Warranty Terms and Conditions (at the rear of this user manual). The foregoing does not affect your statutory rights.
- The use of this rangehood for any other purpose or in any other environment, without our express agreement, will invalidate any warranty or liability claim.
- No modifications to the appliance are permitted.
- Repairs may only be carried out by authorised service agents.
- Cleaning of the rangehood should be carried out on a regular basis.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable that only discharge the air back into the room).
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regulations concerning the discharge of air have to be fulfilled.

Unpacking

During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment. All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

Caution!

During unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept out of reach of children.


Disposal of the appliance

Old appliances should not simply be disposed of with normal household waste, but should be delivered to a collection and recycling centre for electric and electronic equipment. A symbol shown on the product, the instruction manual or the packaging shows that it is suitable for recycling.

Materials used inside the appliance are recyclable and are labelled with information concerning this. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment.

Information on appropriate disposal centres for used devices can be provided by your local authority.

Specifications & Components

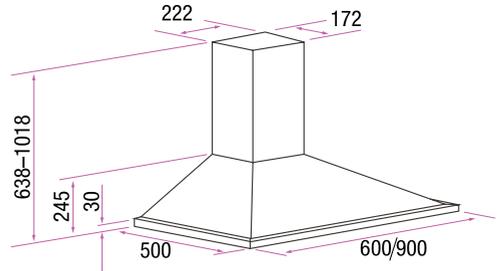

56577 / SRH60:

Product dimensions (W,D,H):
600mm, 500mm, 700-1080mm
Weight (Net/Gross): 9.0kg / 11.5kg
Extraction: Powerful extraction
Other features:
– 3 speed push button control
– 2 x LED lights
– 2 x Stainless steel baffle filters

56576 / SRH90:

Product dimensions (W,D,H):
900mm, 500mm, 700-1080mm
Weight (Net/Gross): 11.0kg / 14.0kg
Extraction: Powerful extraction
Other features:
– 3 speed push button control
– 2 x LED lights
– 3 x Stainless steel baffle filters

Rangehood components

Your Stirling Canopy Rangehood is supplied with:

1 x Rangehood		1 x Wall bracket ("hook") for the rangehood	
1 x Expandable 150mm ducting adapter		1 x Wall bracket for inside chimney pieces	
1 x packet of fasteners, wall plugs and safety screws		1 x Outside chimney bracket	
2 x Stainless steel flue pieces (upper and lower)		1 x User Manual, Quick Start Guide and Warranty Card	

Controls

Your Canopy Rangehood features push button controls (Fig. 1) with three speed levels of extraction.

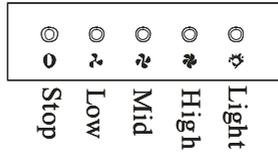


Fig. 1

- Push the 'Low' button, an audible buzzer will sound once, and the rangehood will operate at low speed.
- Push the 'Mid' button, an audible buzzer will sound once, and the rangehood will operate at a medium speed.
- Push the 'High' button, an audible buzzer will sound once, and the rangehood will operate at a high speed.
- Push the 'Light' button and the two lights will come on. To turn the lights off, simply push the 'Light' button again.
- To switch the rangehood motor or light off, simply press the button a second time.

It's important to carefully read the following installation instructions before beginning the installation of your rangehood.

Installation Requirements

Typical installation tools required

You'll most likely require the following tools/equipment (not supplied) for the installation of your rangehood.

- Electrical drill
- Tape Measure
- Screw-driver
- Spirit Level

If ducting your rangehood, you'll also most likely require:

- Jig saw
- Ladder
- Duct-tape
- Ducting

Important installation safety notes:

- Always switch the power off prior to beginning the installation.
- Stainless steel is very easily damaged during installation. Wherever possible, protect the rangehood with the cardboard box or plastic wrap during the installation.
- For safety reasons, this Rangehood must be earthed.
- A power point must be located within 1.5m of the power cord exit from the rangehood, and it should be always accessible to allow isolation from power during cleaning or maintenance.
- A 150mm round ducting adapter is supplied, however all other ducting accessories are not.
- All ducting must comply with building codes and local requirements.
- If you are re-circulating the air, rather than ducting, please ensure that the side outlet grilles are not obstructed in any way as this will affect the efficiency of the rangehood.
- Ensure that the rangehood is mounted in a level position, both horizontally and vertically. This is essential to ensure the rangehood operates correctly and prevents grease build up at one end.

WARNING!

All electrical work associated with the installation of this rangehood must be carried out by a licensed electrician. This rangehood must be correctly installed by a suitably qualified person in strict accordance with all applicable rules and regulations and following the instructions in this manual.

Do not try to install the rangehood yourself; doing so will expose you to danger and void the warranty. Improper installation, adjustment, alteration or service can cause injury or damage. We decline any responsibility for injury or damage, to persons or property, as a result of improper installation.

Ducting options

Before beginning the installation of your rangehood, the method of ducting should be considered and selected. The guide below illustrates the various ducting options.

Note: this rangehood can be operated in recirculation mode where required, although it is recommended to duct wherever possible.



Fig. 2



Fig. 3



Fig. 4

- Straight up and through your tiled or metal roof. (Fig. 2)
- Into your ceiling cavity and then vented through your eaves. (Fig. 3)
- Through your wall (Fig. 4)

Further to your various ducting options, below are some tips on how to correctly duct your rangehood:


- Always use correctly sized ducting – DO NOT reduce the size of the ducting
- Always use solid ducting
- Always use non-flammable ducting
- Always duct to the outside atmosphere
- Do not use flexible ducting
- Do not duct into the ceiling space- always vent to the outside atmosphere.
- Avoid sharp 90 degree bends as much as possible, use 45 degree bends instead wherever possible
- Duct to the outside atmosphere using the shortest duct run possible
- Use cylindrical ducting whenever possible

Positioning the rangehood: Installation heights

- Over gas and electric cookers, we recommend our rangehoods to be mounted at a height of between 600-800mm above the cooking surface.
- Electric cooktops must have a minimum height of 600mm from the underside of the rangehood to the cooktop face.
- Gas cooktops must have a minimum of 650mm from the burner to the underside of the rangehood.
- Over open flame grillers or barbecues, the Gas Regulations require the filters of the rangehood to be at least 1200mm above the cooking surface.

Installing the rangehood

- Once the installation height has been determined, use the fasteners and wall plugs to install the mounting bracket (hook) on to the wall ensuring that it's secured in a level position. The mounting bracket connects to the canopy at the top (i.e. where the chimney connects into the canopy). Also using the fasteners and wall plugs, install the wall bracket for the chimney pieces. (Fig. 5)
- Using the screws provided, attach the expandable 150mm ducting adapter to the canopy. With the two Chimney pieces together, fix the “outside chimney” bracket onto the outside chimney (flue) piece. Ensure that the inner chimney piece can move freely inside. Now attach the chimney pieces to the canopy. (Fig. 6)
- Lift the canopy (including the chimney pieces) on to the wall bracket (hook). (Fig. 7)
- Adjust the height of the inside chimney piece and fix into place with the screws. After adjusting the position of the canopy, fix into place with the safety screws (Fig. 8) into the wall (you'll need to remove the grease filters first).

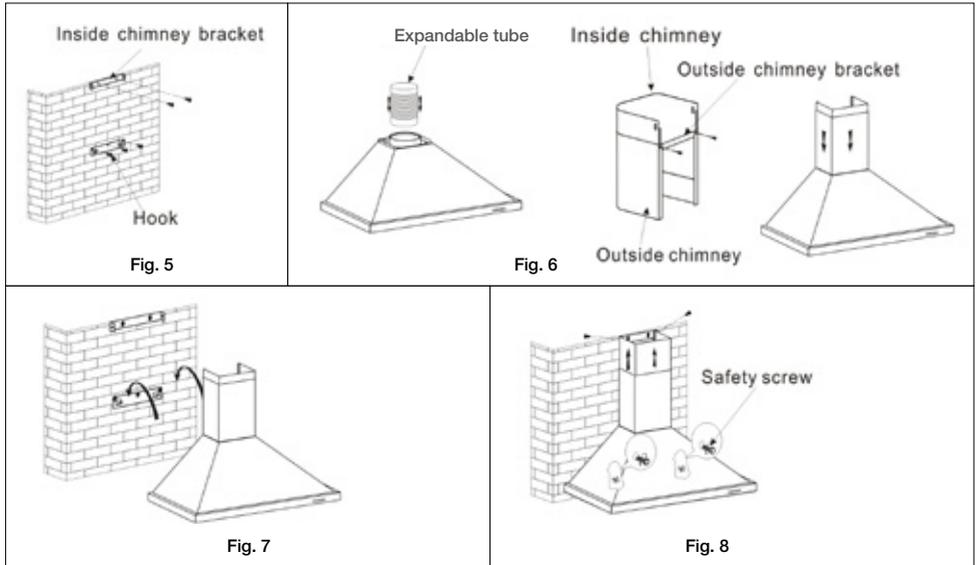

Cleaning & Maintenance

Cleaning the grease filters

Keeping this filter clean will keep the rangehood extraction performance at an optimum. Please strictly follow the guidelines below.

- To remove the grease filters squeeze the spring loaded latch with your fingers and gently lower the filters out. Follow the same process to reinstall.
- The grease filter is made of high-density stainless steel. Please ensure you never use a corrosive detergent during cleaning.
- Method 1: Put the filter into 40-50°C clean water with a small amount of regular dishwashing liquid, and soak for 2-3 mins. Wear gloves and clean with a soft brush. Please do not apply too much pressure, as the filter is delicate and will damage easy.
- Method 2: You can wash your rangehood grease filters in your dishwasher, however please ensure they aren't washed at a temperature above 60°C degrees.

Cleaning the rangehood

To protect your rangehood from corrosion or stains, the stainless steel and glass should be cleaned with hot water with a non-corrosive detergent every two months. Ensure the cloth is well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning. For stubborn stains or marks on the stainless steel, you can try using a specific stainless steel cleaner available from most supermarkets.

Warning!

Please do not use a corrosive detergent, or abrasive cloths, as it will damage the body.

- Keep the motor and other spare parts free from water, as this will cause damage to the appliance.
- Before cleaning the rangehood, always switch the power off at the outlet and unplug the rangehood.
- If your rangehood has a damaged plug or cord, please ensure your rangehood remains unplugged and contact After Sales Support for further assistance. Any electrical work should only be completed by a suitably licenced and authorised person.
- If you're using a carbon filter, it should never be exposed to heat.

Changing a light globe

In the event of a blown globe please contact our Support Team on 1300 11 4357.

Carbon filter (optional)

An optional carbon filter can be purchased separately and installed in your undermount rangehood. Normally the activated carbon filter should be changed every three to six months according to your volume of cooking. Activated carbon filter cannot be washed or recycled. The installation procedure of activated carbon filter is as below.

- Remove the grease filters.
- Insert the first activated carbon filter into the unit and turn it in anti-clockwise direction. Then repeat the same on the other side. (Fig. 9)
- Re-insert the grease filters.

Note: When the activated carbon filter installed, the suction power will be lowered.



Fig. 9

Troubleshooting & Technical Data

Operation in case of emergency

In the event of an emergency you should:

- Switch off all rangehood controls.
- Switch the rangehood off at the power outlet and immediately unplug.
- Call After Sales Support on 1300 11 HELP (4357).

Some minor faults can be fixed by referring to the instructions given in the Troubleshooting section below.

Important!

If your appliance appears to be operating incorrectly, then you should disconnect it from your electrical supply and then contact After Sales Support on 1300 11 HELP (4357).

Warning!

Do not attempt to repair the rangehood yourself.

Please note that if an engineer is asked to attend whilst the product is under warranty and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then they will not complete a repair. This includes situations where the rangehood has been tiled in or sealed in with a sealant.

Please refer to the conditions of that appear on the warranty card at the rear of this user manual.

Fault:	Common Cause:	Common Solutions:
The lights work, however the motor does not work	The motor is blocked or jammed.	Call After Sales Support for further guidance.
	The capacitor is damaged.	Call After Sales Support for further guidance.
Neither the lights or the motor works	Beside the above mentioned, check the following:	
	Light globes are damaged or blown	Call After Sales Support for further guidance.
	The power cord is loose.	Ensure that the rangehood is correctly plugged in and the power outlet is switched on.
The rangehood is vibrating against the wall	The rangehood canopy is not fixed to the wall correctly.	Ensure that the internal safety screws have been used and are tight.
Insufficient suction	The distance between the rangehood and your cooktop is too great.	Have your installer re-adjust the installation position, ensuring that the minimum distances are observed as per the building code.

Technical data

Electrical details: Rated Voltage: 220 – 240 V, 50Hz

| Rated Power: 213W



STIRLING®

60cm/90cm Canopy Rangehood

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 11 4375 or write to us at:

Residentia Group

1/32 Wangaratta St
Richmond VIC 3121
Australia

Email: support@residentiagroup.com.au

Helpline hours of operation:

Mon–Fri

9:30 AM - 5:00 PM

AFTER SALES SUPPORT

1300 11 4375

support@residentiagroup.com.au

MODEL: SRH60 / SRH90 | PRODUCT CODE: 53055 / 53066 | 03/2016





Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 11 4375 before returning it to the store for a refund.

For an electronic copy of this manual, go to www.stirlingappliances.com.au and download a copy.

This page is intentionally left blank

This page is intentionally left blank

This page is intentionally left blank