

# STIRLING®

## STAINLESS STEEL DISHWASHER

14 Standard place settings

6 Wash programs



### Features:



#### 6 Programs

Includes wash programs for heavily, normally or lightly soiled loads, and an eco program for everyday use with low energy consumption.



#### Delay Timer

3 Delay start options:  
3, 6 or 9 hours.



#### Eco Wash

Save energy with this specially designed eco program for everyday use.

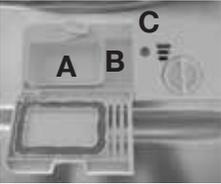


#### Anti-Flood Device

Detects the presence of water in the base of the dishwasher and stops it from filling further.

## Quick Start Guide

For detailed operating instructions, please read the corresponding content in the instruction manual.

Switching on ↓	Plug the dishwasher in, open the door and press the <b>POWER</b> button on the control panel.	
Adding detergent ↓		<p>For each wash cycle, fill dishwasher detergent (or a detergent tablet) into the detergent dispenser compartment (A). For programs with prewash, also fill some detergent in compartment (B), if using powder detergent.</p>
Checking rinse aid ↓		
Loading the baskets ↓	Scrape off leftover food, soften burnt food residues with water, then load the baskets following the dishwasher loading instructions.	
Selecting a program ↓	Close the door and press the <b>PROGRAM</b> button until the selected program lights up.	
Running the dishwasher ↓	Turn on the water tap. Press the <b>START/PAUSE</b> button to start the selected program. The machine will start working after about 10 seconds.	
Changing a program	<p>A running cycle can only be modified if it has been running for a short time. Otherwise the detergent may have already been released and the water already drained. If this is the case, the detergent dispenser must be refilled.</p> <p>Press the <b>START/PAUSE</b> button. Press and hold the <b>PROGRAM</b> button for more than 3 seconds to cancel the current program. Press the <b>PROGRAM</b> button again and select a new program, then press the <b>START/PAUSE</b> button and the dishwasher will start to work again.</p>	
Adding a forgotten dish	<p>To add a dish/utensil that you forgot to load into the dishwasher press the <b>START/PAUSE</b> button, open the door a little and, when the spray arm stop working, open it completely. Add the forgotten dish, close the door, press the <b>START/PAUSE</b> button and the dishwasher will start to work again.</p>	<p><b>WARNING:</b> Open the door carefully, hot steam may escape!</p>
Power disruption during use ↓	If the appliance is switched off or loses power during a wash cycle, when switched on again, please re-select the washing program and operate the dishwasher according to the original power-on state.	
Shutting down ↓	When the washing cycle is finished, the buzzer will sound for 8 seconds and then stop. Press the <b>POWER</b> button to shut down the unit and open the door — <b>take care as hot steam may escape!</b>	
After use	<p>Wait about 15 minutes before unloading the dishwasher to avoid scalding, as the dishes and utensils are still hot and more susceptible to break. They will also dry better. Unload the dishwasher, starting from the lower basket.</p> <p>Turn off the power, close the tap and leave the dishwasher door slightly ajar to let moisture evaporate.</p>	

Model Number	STR-DW14-SS
Capacity	14 Place Settings
Warranty	3 Years In Home
Version	QSG-V1.4

For more information please visit [www.stirlingappliances.com.au](http://www.stirlingappliances.com.au) or call 1300 886 649