

STIRLING®

DISHWASHER

12 Standard place settings
6 Wash programs



Features:



6 Programs

Includes wash programs for heavily, or lightly soiled loads, glass wash, intensive and rapid programs, and an eco program for everyday use with low water and energy consumption.



Delay Start

Programmable for a delayed start in 3, 6, 9 or 12 hours.



Eco Wash

Save energy and water with this specifically designed eco program for everyday use.

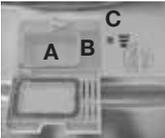


Anti-Flood Device

Detects the presence of water in the base of the dishwasher and stops it from filling further.

Quick Start Guide

For detailed operating instructions, please read the corresponding content in the instruction manual.

Switching on ↓	Plug the dishwasher in, open the door and press the POWER button on the control panel.	
Adding detergent ↓	For each wash cycle, fill dishwasher detergent (or a detergent tablet) into the detergent dispenser compartment (A). For programs with prewash, also fill some detergent in compartment (B), if using powder detergent.	
Checking rinse aid ↓	Unless you use a detergent tablet with rinse aid, make sure there is sufficient liquid rinse aid in the dispenser. Check the mechanical indicator (C), or the electronic indicator on the control panel.	
Loading the baskets ↓	Scrape off leftover food, soften burnt food residues with water, then load the baskets following the dishwasher loading instructions.	
Selecting a program ↓	Close the door and rotate the PROGRAM knob to select the desired program.	
Running the dishwasher ↓	Turn on the water tap. Press the START/PAUSE button to start the selected program. The machine will start working.	
Changing a program	A running cycle can only be modified if it has been running for a short time. Otherwise the detergent may have already been released and the water already drained. If this is the case, the detergent dispenser must be refilled. Press and hold the START/PAUSE button for more than 3 seconds, then you can change the program to the one you wish to run. Press the START/PAUSE button again and the dishwasher will start to work again.	
Adding a forgotten dish	To add a dish/utensil that you forgot to load into the dishwasher, press the START/PAUSE button, open the door a little and, when the spray arm stop working, open it completely. Add the forgotten dish, close the door, press the START/PAUSE button and the dishwasher will start to work again after about 10 seconds.	WARNING: Open the door carefully, hot steam may escape!
Power disruption during use ↓	If the appliance is switched off or loses power during a wash cycle, when switched on again, please re-select the washing program and operate the dishwasher according to the original power-on state.	
Shutting down ↓	When the washing cycle is finished, the buzzer will sound several times and then stop. Press the POWER button to shut down the unit. Open the door slightly to help with the drying process — take care as hot steam may escape!	
After use ↓	Wait about 15 minutes before unloading the dishwasher to avoid scalding, as the dishes and utensils are still hot and more susceptible to break. They will also dry better. Unload the dishwasher, starting from the lower basket. Turn off the power at the outlet, close the water tap and leave the dishwasher door slightly ajar to let residual moisture evaporate.	

Model Number	STR-DW12-W
Capacity	12 Place Settings
Warranty	3 Years In Home
Version	QSG-V1.2

For more information please visit www.stirlingappliances.com.au or call 1300 886 649