



## 20L Microwave Oven with Grill

Model Number D80D20EL-Y4

### INSTRUCTION MANUAL

#### AFTER SALES SUPPORT

1300 886 649  
AUS Hotline Costs

[info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014



N13275

# Contents

- 01 Warranty Details**
- 02 Welcome**
- 03 General Safety Instructions**
- 06 Product Overview**
- 08 Getting Started**
- 12 Instructions**
- 17 Other Useful Information**
- 20 Recipes**
- 25 Repair and Refurbished Goods or Parts Notice**

---

**AFTER SALES SUPPORT**

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014



# STIRLING<sup>®</sup>

20L Microwave Oven with Grill

## Warranty Details

---

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

---

#### AFTER SALES SUPPORT

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014



# Welcome

Congratulations on choosing to buy a STIRLING® product.

All products brought to you by STIRLING® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty. We hope you will enjoy using your purchase for many years to come.

---

**AFTER SALES SUPPORT**

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# General Safety Instructions

Read this manual thoroughly before first use. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. Note the product serial number on this manual, so you always have it ready at hand. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

## **Precautions to avoid possible exposure to excessive microwave energy**

- Do not tamper with the safety locking mechanism, and do not attempt to use the microwave oven with the door open. The door needs to be tightly shut to prevent harmful exposure to microwave energy.
- Do not allow any object to prevent the door from closing. Also, do not allow cleaner residue to accumulate on sealing surfaces.
- Do not use the oven if it is damaged. It is particularly important that there is no damage to the oven door (bent, warped or otherwise damaged), hinges and latches (broken or loosened), door seals and sealing surfaces.
- **WARNING:** Do not attempt to repair the oven or adjust it yourself. Any repair or service must only be carried out by suitably qualified personnel. It is hazardous for anyone else to remove a cover which protects against microwave energy exposure.

## **Precautions to avoid the risk of fire in the microwave interior**

- If you detect smoke, switch the oven off immediately, unplug it, and keep the door closed in order to stifle any flames.
- Keep an eye on the microwave oven when heating food in plastic or paper containers as these could ignite.
- **WARNING:** Do not heat food in sealed containers as they could explode.
- Do not leave paper products, cooking utensils, or food in the interior, and do not use the oven for storage purposes when it is not in use.
- Remove wire twist ties from paper or plastic bags before placing them in the microwave oven.
- Do not use corrosive chemicals in this appliance.
- Do not use the oven when it is empty.

---

### **AFTER SALES SUPPORT**

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# General Safety Instructions (Cont.)

## Electrical safety and cord handling

- **Voltage:** Make sure that your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating plate.
- **Safety switch:** The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- **Wall outlet:** The socket must be readily accessible so that you can easily unplug the microwave oven in an emergency.
- **Electrical safety:** Do not insert any objects into the appliance.
- **Power cord:** Do not kink or damage the power cord. Do not let it hang over the edge of a table or benchtop, and do not let it touch hot or sharp surfaces. Make sure the cord does not run under the microwave oven. Run it so that there will be no risk of anyone pulling it inadvertently or tripping over it.
- **Disconnect:** Switch the appliance off and unplug it from the power supply after use and before cleaning, servicing, or moving it. When disconnecting, do not pull the cord. Grip the plug and pull it gently out of the outlet.
- **WARNING: Do not immerse!** To reduce the risk of electrocution and other electrical hazards, do not immerse the cord or plug in water, do not spill liquids into the oven, and do not operate it with wet hands.
- **Damage:** Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- **Repair:** If the appliance and/or its supply cord are damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. Do not attempt to repair, disassemble, or modify the appliance. There are no user-serviceable parts contained within.

## Usage conditions and restrictions

- **Intended use:** This appliance is intended for indoor domestic use only. Do not use the appliance outdoors. Appropriate domestic settings include households, staff kitchen areas, shops, offices, farm houses and other working environments, use by clients in hotels, motels, bed and breakfast establishments and other residential type environments.
- **Purpose:** This microwave oven is specifically designed to heat, cook or dry food in a domestic environment. It is not designed for industrial or laboratory use. Do not use the appliance for anything other than its intended purpose.

# General Safety Instructions (Cont.)

- **Usage restrictions:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Young children should be supervised to ensure they do not play with the appliance. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- **Cleaning:** Maintain the oven in a clean condition to avoid surface deterioration, which could affect its working life and result in a hazard risk. Clean the oven regularly and remove food residues from door seals, cavities and adjacent parts.
- **Appropriate installation and use:** Improper installation or the use of accessories not recommended in this manual or by the appliance manufacturer may result in fire, electric shock and/or personal injury. We accept no liability for any damage due to improper use or incorrect handling.

## Grounding/earthing instructions

This appliance must be earthed (grounded). We accept no liability for damage to the oven or personal injury resulting from failure to observe any electrical connection procedures. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance for the electric current.



The plug must be connected to an appropriate outlet that is installed and earthed in accordance with all local standards and requirements. If unsure, consult an electrician or a service representative. Do not, under any circumstances, cut or remove the third (grounding) prong from the power plug.

It is recommended that a separate circuit be provided for use by the microwave alone. The wires in the appliance power supply cord are coloured in accordance as follows: green and yellow = earth; blue = neutral; brown = live.

**NOTE:** This product is Group 2 Class B ISM equipment. In Group 2 equipment, radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation. Class B equipment is suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

---

### AFTER SALES SUPPORT


  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# Product Overview

## The microwave oven

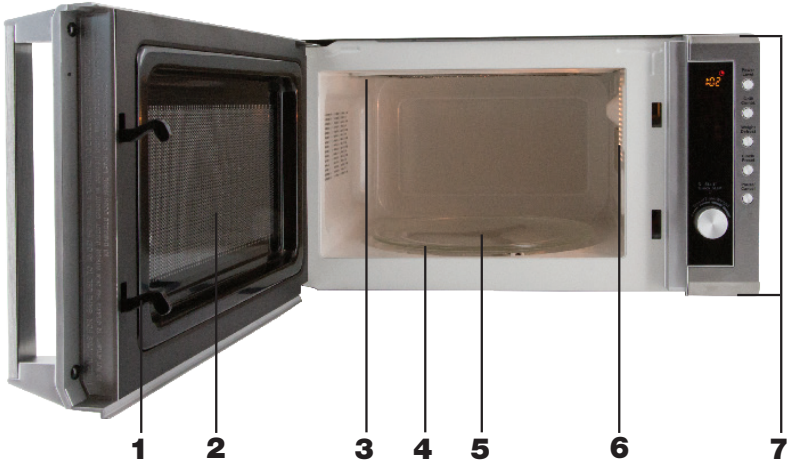

- 1 Door safety lock system
- 2 Observation window
- 3 Grill heater
- 4 Glass tray
- 5 Roller (beneath the glass tray)
- 6 Wave guide cover (do not remove)
- 7 Control panel (described on the opposite page)
- 8 Function buttons (described on the opposite page)
- 9 Function dial
- 10 Door handle
- 11 Grill rack (for use in grill mode only)





# Product Overview (Cont.)

## The control panel



### **MENU ACTION DISPLAY SCREEN**

Cooking time, power, action indicators and clock time are displayed.

### **POWER LEVEL**

This button is used to set the microwave cooking power level.

### **GRILL/COMBI.**

This button is used to set a grill cooking program or two combination cooking programs.

### **WEIGHT DEFROST**

This button is used to set a weight based defrost program.

### **CLOCK/PRESET**

This button is used to select a 12-hour or 24-hour clock cycle. It is also used to program the oven for a delayed start time.

### **PAUSE/CANCEL**

This button is used to cancel a setting or reset the oven before setting a program. It is also used for setting the child lock.

### **START/QUICK START (FUNCTION DIAL)**

This button is used to start a program and to set the quick start function.

### **MENU/TIME/WEIGHT (FUNCTION DIAL)**

This dial is used to to set the oven clock time, input cooking time, and enter the weight or amount of food. Turning it anticlockwise allows you to select from the auto-cooking menu.

#### **AFTER SALES SUPPORT**

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# Getting Started

## Before first use

- Unpack the appliance and remove any packing materials from the interior. Keep all packaging materials until you have made sure your new microwave oven is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Unwind the power supply cord to its full length and inspect it for damage. Then check the microwave oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surfaces, broken or loose door hinges and latches, or dents inside the interior or on the door.  
**WARNING:** If there is any damage to the appliance or its cord, do not operate the microwave oven! Contact our after sales support line.
- Read this manual to familiarise yourself with the parts and operating principles. Pay particular attention to the safety instructions on the previous pages.
- Wipe the inside surfaces of the microwave oven with a damp cloth. Wash the glass tray in warm water with a little washing detergent to remove any dust from transportation, using a soft cloth or sponge. Rinse with clean water and dry thoroughly.
- The oven may produce fumes or odour when the grill function is first used. This is due to lubricating oils burning off the heating elements. This is normal and no cause for concern. It will disappear after a period of use. Ensure sufficient ventilation.

## Installation

- Place the microwave oven on a flat, stable surface which can support the weight of the oven plus the heaviest foods likely to be cooked in it.  
**WARNING:** Do not place the microwave oven where heat, moisture or high humidity are generated, or near combustible materials.  
Do not place it in a cabinet; it is intended to be used freestanding.
- For correct operation, the microwave oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at the back and 5cm on both sides. Do not cover or block any openings on the appliance. Do not remove the feet.
- Place the glass tray's roller in position on the floor of the microwave's interior with the shaft in the centre. Then fit the glass tray on top of the shaft, making sure it sits securely in place and can move freely on the roller.  
**WARNING:** Do not operate the appliance without the glass tray, roller and shaft in their proper positions.

# Getting Started (Cont.)

## Radio interference

Operation of the microwave oven may interfere with your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

- Cleaning the microwave oven door and sealing surfaces.
- Re-orienting the antenna of the radio or television.
- Relocating the microwave oven with respect to the receiver.
- Moving the microwave oven away from the receiver.
- Plugging the microwave oven into a different power outlet so that the microwave oven and the receiver are on different branch circuits.

## Safe microwave cooking

- Only use utensils that are suitable for use in a microwave oven. See page 10 for a detailed list of suitable cookware.
- **WARNING:** Never heat food in sealed containers as they may explode.
- **CAUTION: Hot!** Use pot holders or oven mitts to handle cooking utensils that have become hot following a cooking process.
- Take care when handling containers with hot drinks, as microwave heating can result in eruptive boiling.
- **WARNING:** To avoid burns, stir or shake the contents of feeding bottles and baby food jars and always check the temperature before serving.
- Do not attempt to fry food in the oven, as hot oil can damage oven parts and utensils, or cause skin burns.
- Do not heat eggs in their shell or whole hard-boiled eggs, as they may explode, even after microwave heating has ended.

## Safe grill / combination cooking

- Take care when using the oven in combination or grill mode as the inside and parts become hot during use.
- Wear oven mitts when handling food and touching any part of the oven that has become hot during use.
- The provided grill rack is specially designed for use in the microwave oven **in grilling mode only** so that it can be used without creating a hazard. However, other metallic items, and items which appear metallic, should **not** be placed in the microwave.

---

### AFTER SALES SUPPORT

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# Getting Started (Cont.)

## Microwave cookware guide

- Cookware used for microwaving must be microwave safe. Use the table below to help you select the right cookware and utensils for use in the oven.

Cookware	Microwave	Grill	Combination
Heat-resistant glass	Yes	Yes	Yes
Non heat-resistant glass	No	No	No
Heat-resistant ceramics	Yes	Yes	Yes
Microwave safe plastic	Yes	No	No
Kitchen paper	Yes	No	No
Metal tray or metal rack	No	Yes	No
Aluminum foil or container	No	Yes	No

- We recommend round/oval dishes for microwave cooking rather than square/oblong ones, as food in the corners of a container tends to overcook.
- Microwaves cannot penetrate metal, so do not use any cookware made of or containing metal, such as dishes with a metallic trim, metal racks, trays or utensils, aluminium foil, or foil containers. **The provided metal rack is specially designed for this microwave when used in grill mode. Do not use the rack in microwave or combination mode!**
- Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- You may wrap narrow strips of aluminium foil around parts of the food to prevent overcooking of exposed areas. However, take care not to use too much foil, and keep a distance of 3cm between the foil and the interior wall.
- Cover the food, but not tightly, as some ventilation is necessary for even heating.

## Microwave cooking principles

- Watch the cooking time. Cook for the shortest amount of time indicated and add more time as needed. Severely overcooked food can smoke or ignite.
- Cover the food, but not tightly, to prevent spattering and help food cook evenly.
- Turn foods over once during microwaving to speed up the cooking time for smaller pieces of food. Large pieces must be turned over at least once.
- Arrange the food so the thickest parts are towards the outside of the dish.
- Pierce foods with nonporous skins such as potatoes, squash, apples, chestnuts or sausages before cooking.

**NOTE:** Once the microwave oven has stopped cooking, the fan inside will still run to cool the oven. It will stop automatically.

# Getting Started (Cont.)

## Setting the clock

This microwave oven has a 12 or 24-hour clock.

- **To set the desired clock cycle** (12 or 24 hours), press the CLOCK/PRESET button once or twice.
- **To set the microwave oven clock time**, turn the MENU/TIME/WEIGHT dial to set the desired hour. Press the CLOCK/PRESET button again, then turn the MENU/TIME/WEIGHT dial again to set the desired minutes. Press the CLOCK/PRESET button again to confirm the setting.
- **To check the time during cooking**, press the CLOCK/PRESET button.

## Setting microwave controls

- Each time a button is pressed, a **beep** will sound to acknowledge the action.
- **Two beeps** indicate that the oven does not accept the entry. Please check and try again.
- At the end of a set cooking program, the oven will **beep several times** and "End" will appear on the screen. It will keep beeping until you open the door or press PAUSE/CANCEL to reset.

## Quick start

This is a convenient setting for heating food quickly at full microwave power.

- **To set the cooking time**, press the START/QUICK START dial repeatedly. The oven will automatically start working at full power.
- **To extend the cooking time** during cooking, press the START/QUICK START dial. Each press adds 30 seconds up to a maximum of 10 minutes.

## Child safety lock

The child safety lock prevents unsupervised operation by young children. Once set, the lock indicator will appear on the display and the oven cannot be operated.

- **To set the child safety lock**, press and hold the PAUSE/CANCEL button for four seconds: a beep will sound and the lock indicator will appear on the display. In locked state, all buttons are disabled.
- **To cancel the child safety lock**, press and hold the PAUSE/CANCEL button for four seconds: a beep will sound and the lock indicator will go off.

## Stopping the oven during operation

- **To pause the oven** during operation, press the PAUSE/CANCEL button.

---

### AFTER SALES SUPPORT

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# Instructions

## Microwave cooking

Microwave cooking allows you to customise cooking power and time. First, select a power level by pressing the POWER LEVEL button a number of times (see the table below). Then set the cooking time (maximum 95 minutes), using the MENU/TIME/WEIGHT dial, before pressing the START/QUICK START button.

Press POWER LEVEL	Power	Cooking Power
Once	100%	High
Twice	80%	Med. High
3 times	60%	Medium
4 times	40%	Med. Low
5 times	20%	Low

**Example:** To cook for food for 5 minutes at 60% of the microwave's full power:

- Press POWER LEVEL three times until 60% is shown on the display.
- Turn the MENU/TIME/WEIGHT dial to 5:00.
- Press START/QUICK START to begin.

### NOTE:

- Press POWER LEVEL check the present cooking power during cooking.
- Microwave safe cookware must be used for microwave cooking.

## Auto cooking

This microwave oven has several preset cooking settings for cooking particular types and quantities of food automatically, without the need for setting cooking time or power level. Just select the type of food (popcorn, coffee/beverage, fresh vegetables, potato, pizza, reheat, grilled chicken, and grilled steak) and enter its weight. You may need to turn the food over during the process to ensure even cooking. Details of each program are in the table below and on the next page.

**NOTE:** The results of auto cooking depend on factors such as fluctuations of voltage, the shape and size of the food, your personal cooking preferences, and even how well you place the food in the oven. Adjust if necessary.

### To set an auto cooking program:

- In standby mode, turn the MENU/TIME/WEIGHT dial anticlockwise to select the code. An icon will light up on the menu action screen to show which food is represented by each code. Press the dial (START/QUICK START) to confirm.
- Turn the MENU/TIME/WEIGHT dial to select the weight or amount of food.
- Press the dial (START/QUICK START) to begin.

# Instructions (Cont.)

## Auto cooking menu

Code	Food	Weight (g)	Display	Function/ Power	Cooking Time (min:sec)
A01	Popcorn	99	99	Microwave 100%	2:30
A02	Coffee/Beverage (200ml/cup)	200	1	Microwave 100%	1:30
		400	2		2:40
		600	3		3:50
A03	Fresh Vegetable	100	100	Microwave 100%	3:00
		200	200		4:00
		300	300		5:00
		400	400		6:00
		500	500		7:00
A04	Potato	230	1	Microwave 100%	5:00
		460	2		9:00
		690	3		13:00
A05	Pizza	150	150	Microwave 100%	0:50
		300	300		1:20
		450	450		1:50
A06	Reheat	200	200	Microwave 100%	1:30
		300	300		2:00
		400	400		2:30
		500	500		3:00
		600	600		3:30
		700	700		4:00
		800	800		4:30
A07	Grilled Chicken (see note below)	800	800	Combi 2	33:00
		1000	1000		36:00
		1200	1200		39:00
		1400	1400		42:00
A08	Grilled Steaks (see note below)	100	100	Combi 1	9:00
		200	200		12:00
		300	300		15:00
		400	400		18:00
		500	500		21:00

**NOTE:** The oven will beep during this program, and pause to remind you to turn food over. Press START/QUICK START to resume cooking.

### AFTER SALES SUPPORT

 1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# Instructions (Cont.)

## Weight defrost

The microwave oven is perfect for easy defrosting of frozen meat, poultry, seafood or ready cooked frozen food. Just enter the weight of the frozen food you want to defrost (between 100g and 1800g); the defrosting time and power level are automatically set.

**Example:** To defrost 500g of frozen mince:

- Press the WEIGHT DEFROST button once. The display screen will show 1S, 100g, and the defrost icon.
- Rotate the MENU/TIME/WEIGHT dial to select 500g.
- Press START/QUICK START to begin.

### NOTE:

- The defrost process is divided into three stages, each stage taking up one third of the defrosting time. After two thirds of the defrosting time, the microwave oven will pause and beep to remind you to turn the food over (or to remove parts of the food that are already defrosted). Press the START/QUICK START dial to resume the defrosting.
- Microwave safe cookware must be used for microwave defrosting.

## Grill cooking

A grill element inside the oven allows you to grill meat (such as steaks, chops, kebabs, sausages), smaller pieces of chicken, fish fillets or vegetables suitable for grilling. This function is also suitable for preparing grilled sandwiches and snacks with a crumbed or grated cheese topping. The heat setting for grill cooking is automatic. You only need to program the time (maximum grilling time is 95 minutes).

**Example:** To program grill cooking for 12 minutes:

- Press the GRILL/COMBI button once. The display screen will show 1S and the grill icon.
- Turn the MENU/TIME/WEIGHT dial to enter 12:00.
- Press START/QUICK START once for the grill program to start. It will stop after the set time.

**NOTE:** The supplied metal grill rack may be used for grill cooking.



# Instructions (Cont.)

## Combination cooking

This feature allows you to combine grill with microwave cooking on two different settings. The two options divide the cooking time into stages, so that a percentage of the cooking time is devoted to microwave cooking and the remaining percentage is spent grilling.

Press GRILL/COMBI	Display	Microwave	Grill
1x	1S	0%	100%
2x	1S, CO-1	30%	70%
3x	1S, CO-2	55%	45%

### Combination 1 (30% microwave, 70% grill)

The Combination 1 setting is particularly suitable for food that you want cooked through fast and crispy on top: fish, for example, or au gratin dishes. On this setting 30% of the total cooking time is devoted to microwave cooking and the remaining 70% is spent grilling.

**Example:** To set the oven to cook with COMBINATION 1 for 12 minutes.

- Press GRILL/COMBI twice. The code 1S, CO-1 will appear on the screen.
- Turn the MENU/TIME/WEIGHT dial to enter 12:00.
- Press START/QUICK START to begin.

### Combination 2 (55% microwave, 45% grill)

The Combination 2 setting is particularly suitable for cooking pudding, omelettes, baked potatoes or poultry – food that needs proportionally longer microwave cooking than on the other combination setting. On this setting 55% of the total cooking time is devoted to microwave cooking and the remaining 45% to grilling.

**Example:** To set the oven to cook with COMBINATION 2 for 25 minutes.

- Press GRILL/COMBI 3 times. The code 1S, CO-2 will show on the screen.
- Turn the MENU/TIME/WEIGHT dial to enter 25:00.
- Press START/QUICK START to begin.

### NOTE:

- The maximum cooking time is 95 minutes.
- The cookware used for combination cooking must be microwave safe and ovenproof.

# Instructions (Cont.)

## Preset cooking (timer function)

The preset timer allows you to program the oven to start cooking at a later time.

**NOTE:** To use this preset timer, the clock must be set to the correct time.

**Example:** To set the oven to start up at 11:30 at 80% power:

- Place food in the oven and close the door.
- Press the POWER LEVEL button twice so that 80% is selected.
- Rotate the MENU/TIME/WEIGHT dial to input the cooking time.
- Press the CLOCK/PRESET button once.
- Rotate the MENU/TIME/WEIGHT dial to input the hour: 11.
- Press the CLOCK/PRESET button.
- Rotate the MENU/TIME/WEIGHT to input the minutes: 30.
- Press START/QUICK START to confirm. The oven will start cooking at 11:30.
- To cancel the operation after it has begun, press CLOCK/PRESET, then press PAUSE/CANCEL.

## Multistage cooking

Some recipes may require more than one type of cooking. Your oven can be set to change from one program to another automatically, for up to three sequences. The following example shows the steps involved in setting up such a program.

**Example:** To set the oven for a microwave cooking program followed by a grill cooking program, and then a combination 1 program:

- Input a microwave cooking program without pressing START/QUICK START.
- Input a grill program without pressing START/QUICK START.
- Input a Combination 1 cooking program.
- Press START/QUICK START.

### **NOTE:**

- Quick start, Weight defrost and Auto cook cannot be set in a multistage cooking program.
- The respective lights (1S, 2S, and 3S) will appear on the menu action screen to show which stage the oven is operating in.
- Microwave safe cookware must be used for multistage cooking.

# Other Useful Information

## Cleaning and care

**CAUTION:** Before cleaning or maintenance, make sure to turn off the microwave oven and disconnect the plug from the wall socket. Also make sure the oven has cooled sufficiently before cleaning as the sides of a combination oven may get hot during use.

- Keep the inside of the microwave oven clean. When food splatters or liquids spill and adhere to the microwave oven ceiling and walls, wipe them with a damp cloth. Mild detergent may be used if the microwave oven is very dirty. Avoid the use of caustic, abrasive or other harsh cleaners as they may stain, streak or dull the door surface.
- **CAUTION:** To prevent damage to the operating parts inside the microwave oven, do not let water seep into the ventilation openings. Clean the outside surfaces with a damp cloth only.
- When cleaning the control panel, leave the microwave oven door open to prevent the microwave oven from turning on.
- Wipe the door and window, the door seals and adjacent parts with a damp cloth to remove any spills. Do not use abrasive cleaners.
- Do not allow the control panel to become wet. Clean it with a soft, damp cloth.
- If steam accumulates inside or around the outside of the microwave oven door, wipe it with a soft cloth. This is normal and may occur when the microwave oven is operated under high humidity conditions.
- It is occasionally necessary to remove the glass tray for cleaning. Wash it in warm, sudsy water, or in a dishwasher.
- To avoid excessive noise, wipe the roller and microwave floor regularly with a damp cloth. When removing the glass tray's roller from the interior floor for cleaning, be sure to replace it afterwards in the proper position on the shaft.
- To remove persistent odours from your microwave oven, combine a cup of water with the juice and skin of one lemon in a deep microwavable bowl and microwave for five minutes. Then wipe the oven thoroughly and dry with a soft cloth.
- Make sure to clean your microwave oven regularly and remove any food residues. Failure to maintain the microwave in a clean condition could lead to deterioration of the surface, which could adversely affect the life of the appliance and could present a potential hazard.

---

### AFTER SALES SUPPORT

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

# Other Useful Information (Cont.)

## Troubleshooting guide

If you encounter problems with your microwave oven, check the issues raised below to see whether your problem can be solved easily without a service call.

- Check to ensure that the microwave oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure that the control panel is programmed correctly.
- Check to ensure that the door is securely closed and the door safety lock system is engaged. Otherwise, the microwave energy will not flow into the oven.
- If it becomes necessary to replace the microwave light, consult a qualified electrician to have it replaced or contact the after sales support line for assistance.

If none of the solutions offered on this page help you solve the problem, then contact a qualified technician or our after sales support line for advice on examination, repair or return of the product.

### **WARNING: DANGER!**

Do not try to adjust or repair the microwave oven yourself. **This appliance has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.** Do not try to adjust or repair the microwave oven yourself. Do not attempt to take the appliance apart.

# Other Useful Information (Cont.)

## Technical specifications

Model	20L Microwave Oven with Grill
Model Number	D80D20EL-Y4
Voltage	230-240V~50Hz
Power Consumption	1200W (Microwave)
Power Output	800W (Microwave)
	1000W (Grill)
Operation Frequency	2450MHz
Outside Dimensions	262mm (H) × 452mm (W) × 386mm (D)
Oven Cavity Dimensions	210mm (H) × 315mm (W) × 329mm (D)
Oven Capacity	20 Litres
Net Weight	Approximately 12.5kg
Turntable Diameter	245mm

## Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of the appliance appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

# Recipes

## Vegetable bake (serves 4-6)

### Ingredients

450g carrots, sliced  
450g new potatoes, sliced  
450g cauliflower florets  
450g broccoli florets  
1 medium onion, chopped  
Salt and freshly ground black pepper  
50g butter  
50g plain flour  
600ml milk  
175g cheddar cheese, grated

### Method

- Place carrots, potatoes and 2 tablespoons of water in a large, microwave safe bowl. Cover.
- Turn the MENU/TIME/WEIGHT dial to 7:00 and microwave the vegetables for 7 minutes on 100% power, stopping and stirring once in the middle of the cooking time.
- Add the cauliflower, broccoli and chopped onion and microwave for a further 5 minutes until cooked.
- Take the bowl out of the microwave oven and let the vegetables rest, covered.
- Meanwhile, place the butter in a microwave safe jug and microwave for 50 seconds. Take out of the oven, blend in the flour and whisk in the milk until smooth.
- Cook on high for 3 minutes, stopping and stirring frequently. Season to taste.
- Drain all the water from the microwaved vegetables, then place them in an ovenproof dish. Pour over the white sauce and sprinkle with the cheese.
- Place the dish in the microwave oven and press GRILL/COMBI once: the grill mark (1S) will show on the screen.
- Turn the MENU/TIME/WEIGHT dial to enter 5:00 minutes. Close the door and press START/QUICK START once. Grill until browned.

# Recipes (Cont.)

## Grilled lamb chops with apricots

### Ingredients (serves 4-6)

8 lamb chops

400g can apricot halves

### Marinade

3 tbsp oil

1 tbsp red wine vinegar

Syrup from the canned apricots

Salt and freshly ground black pepper

2 chopped spring onions

Parsley sprigs to garnish

### Method

- Mix all the marinade ingredients together and pour into a shallow ovenproof dish.
- Add the lamb chops, making sure they are well coated with the marinade.
- Marinade the chops for at least an hour, turning and basting frequently.
- Arrange the apricot halves around the chops.
- Press the GRILL/COMBI once. The grill mark (1S) will show on the screen.
- Turn the MENU/TIME/WEIGHT dial to enter 8:00 minutes.
- Take the glass tray out of the microwave oven and replace it with the grill rack.
- Place the dish with the prepared lamb chops on top of the grill rack.  
**NOTE:** If the dish does not fit on top of the grill rack, place it on the glass tray and extend the grilling time as required, until browned to your liking.
- Close the oven door and press START/QUICK START once.
- At the end of the 8 minutes grilling time, turn the chops over and reset the MENU/TIME/WEIGHT dial to a further 5:00 minutes. Cook until tender, extending the cooking time, if required.

# Recipes (Cont.)

## Chicken risotto

### Ingredients (serves 4-6)

600g chicken thigh fillets, diced  
1 leek, thinly sliced  
200g button mushrooms, sliced  
1 cup arborio rice  
600ml chicken stock  
2 tsp dried oregano  
½ cup grated parmesan cheese  
½ cup frozen peas  
Black pepper  
50g flaked almonds, toasted

### Method

- Combine diced chicken, leek, mushrooms, rice, stock and oregano in a large microwave safe dish. Cover.
- Place the dish on the glass tray.
- Turn the MENU/TIME/WEIGHT dial to 10:00 minutes, then press START/QUICK START to begin.
- At the end of the 10 minutes, open the door, lift of the cover and stir the risotto, taking care not to burn yourself on the hot steam that is likely to escape. Replace the cover after stirring.
- Press the POWER LEVEL three times and cook for a further 15 minutes with 60% power.
- At the end of the cooking time, stir through the cheese, peas and pepper. Cover and stand for 5 minutes.
- Serve sprinkled with toasted almond flakes.



# Recipes (Cont.)

## Blackberry and apple crumble

### Ingredients (serves 4-6)

450g cooking apples

300g blackberries

75g sugar

### Topping

175g plain flour

175g brown sugar



75g butter, unsalted

### Method

- Layer the apples, blackberries and sugar in a shallow, microwave safe and oven proof casserole dish.
- In a separate bowl, mix the flour and brown sugar together, and rub in the butter until the mixture resembles fine breadcrumbs.
- Sprinkle the topping over the fruit.
- Place the dish on the glass tray in the microwave oven and close the door.
- Press GRILL/COMBI 3 times. The code 1S, CO-2 will show on the screen.
- Turn the MENU/TIME/WEIGHT dial to enter 15:00 minutes. The dessert will be cooked with microwave power for 55% of the time and browned under the grill for the remaining 45% of the time.
- At the end of the cooking time, take the dish carefully out of the oven using oven mitts.
- Serve with ice cream.

---

**AFTER SALES SUPPORT**

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014



# STIRLING<sup>®</sup>

20L Microwave Oven with Grill

## Repair and Refurbished Goods or Parts Notice

---

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

**Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.**

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252  
PO BOX 6056 Frenchs Forest, Sydney, Australia NSW 2086  
Telephone: 1300 886 649 (Aust) - Fax: (02) 9975 2688  
Tempo Help Desk: 1300 886 649 (Aust)  
(Operating Hours: Mon-Fri 08:30am to 06:00pm EST)  
Email: [info@tempo.org](mailto:info@tempo.org)

---

### AFTER SALES SUPPORT

  1300 886 649  
AUS Hotline Costs

 [info@tempo.org](mailto:info@tempo.org)

MODEL: D80D20EL-Y4 PRODUCT CODE:3158 08/2014

**3**

YEAR WARRANTY



## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.